



SELF-CONTAINED CUBER

**IM-240APE
IM-240APE-23
IM-240APE-32
IM-240AWPE
IM-240AWPE-23**

PARTS LIST

[HE]

M119
M119-D001,D002,D006,D007
M119-D200,D201,D202,D206,D207

P-0 DEC. 2024

List of Specifications

IM-240APE	M119	Air-cooled Standard
IM-240APE-23	M119-D001	23mm ICE of IM-240APE
IM-240APE-32	M119-D002	32mm ICE of IM-240APE
IM-240AWPE	M119-D006	Water-cooled Standard
IM-240AWPE-23	M119-D007	23mm ICE of IM-240AWPE
IM-240APE	M119-D200	Air-cooled Standard
IM-240APE-23	M119-D201	23mm ICE of IM-240APE
IM-240APE-32	M119-D202	32mm ICE of IM-240APE
IM-240AWPE	M119-D206	Water-cooled Standard
IM-240AWPE-23	M119-D207	23mm ICE of IM-240AWPE

List of Functions

Basic		Cube
Basic + UV	U	UltraCube

Auxiliary Codes

Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

MARKS LOCATED UNDER THE AUXILIARY CODE

- = Part deleted.

FASTENER PART NUMBER


SCREWS

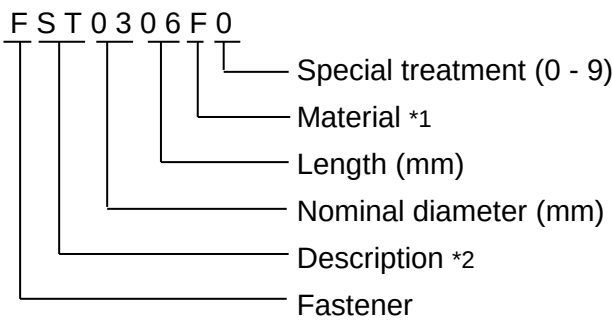

*1 Material


- F: Steel
- S: Austenitic stainless steel
- M: Martensitic stainless steel
- B: Copper alloy
- P: Polycarbonate
- N: Polyamide
- V: PVC
- A: ABS
- X: Polyacetal
- L: Aluminum

NUTS & WASHERS

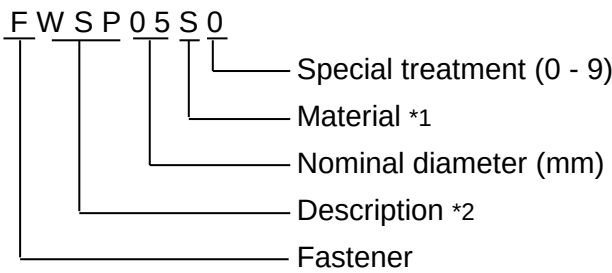

*2 Description

- First letter
- S: Machine screw
- T: Tapping screw
- M: Wood screw
- B: Bolt
- W: Washer
- N: Nut

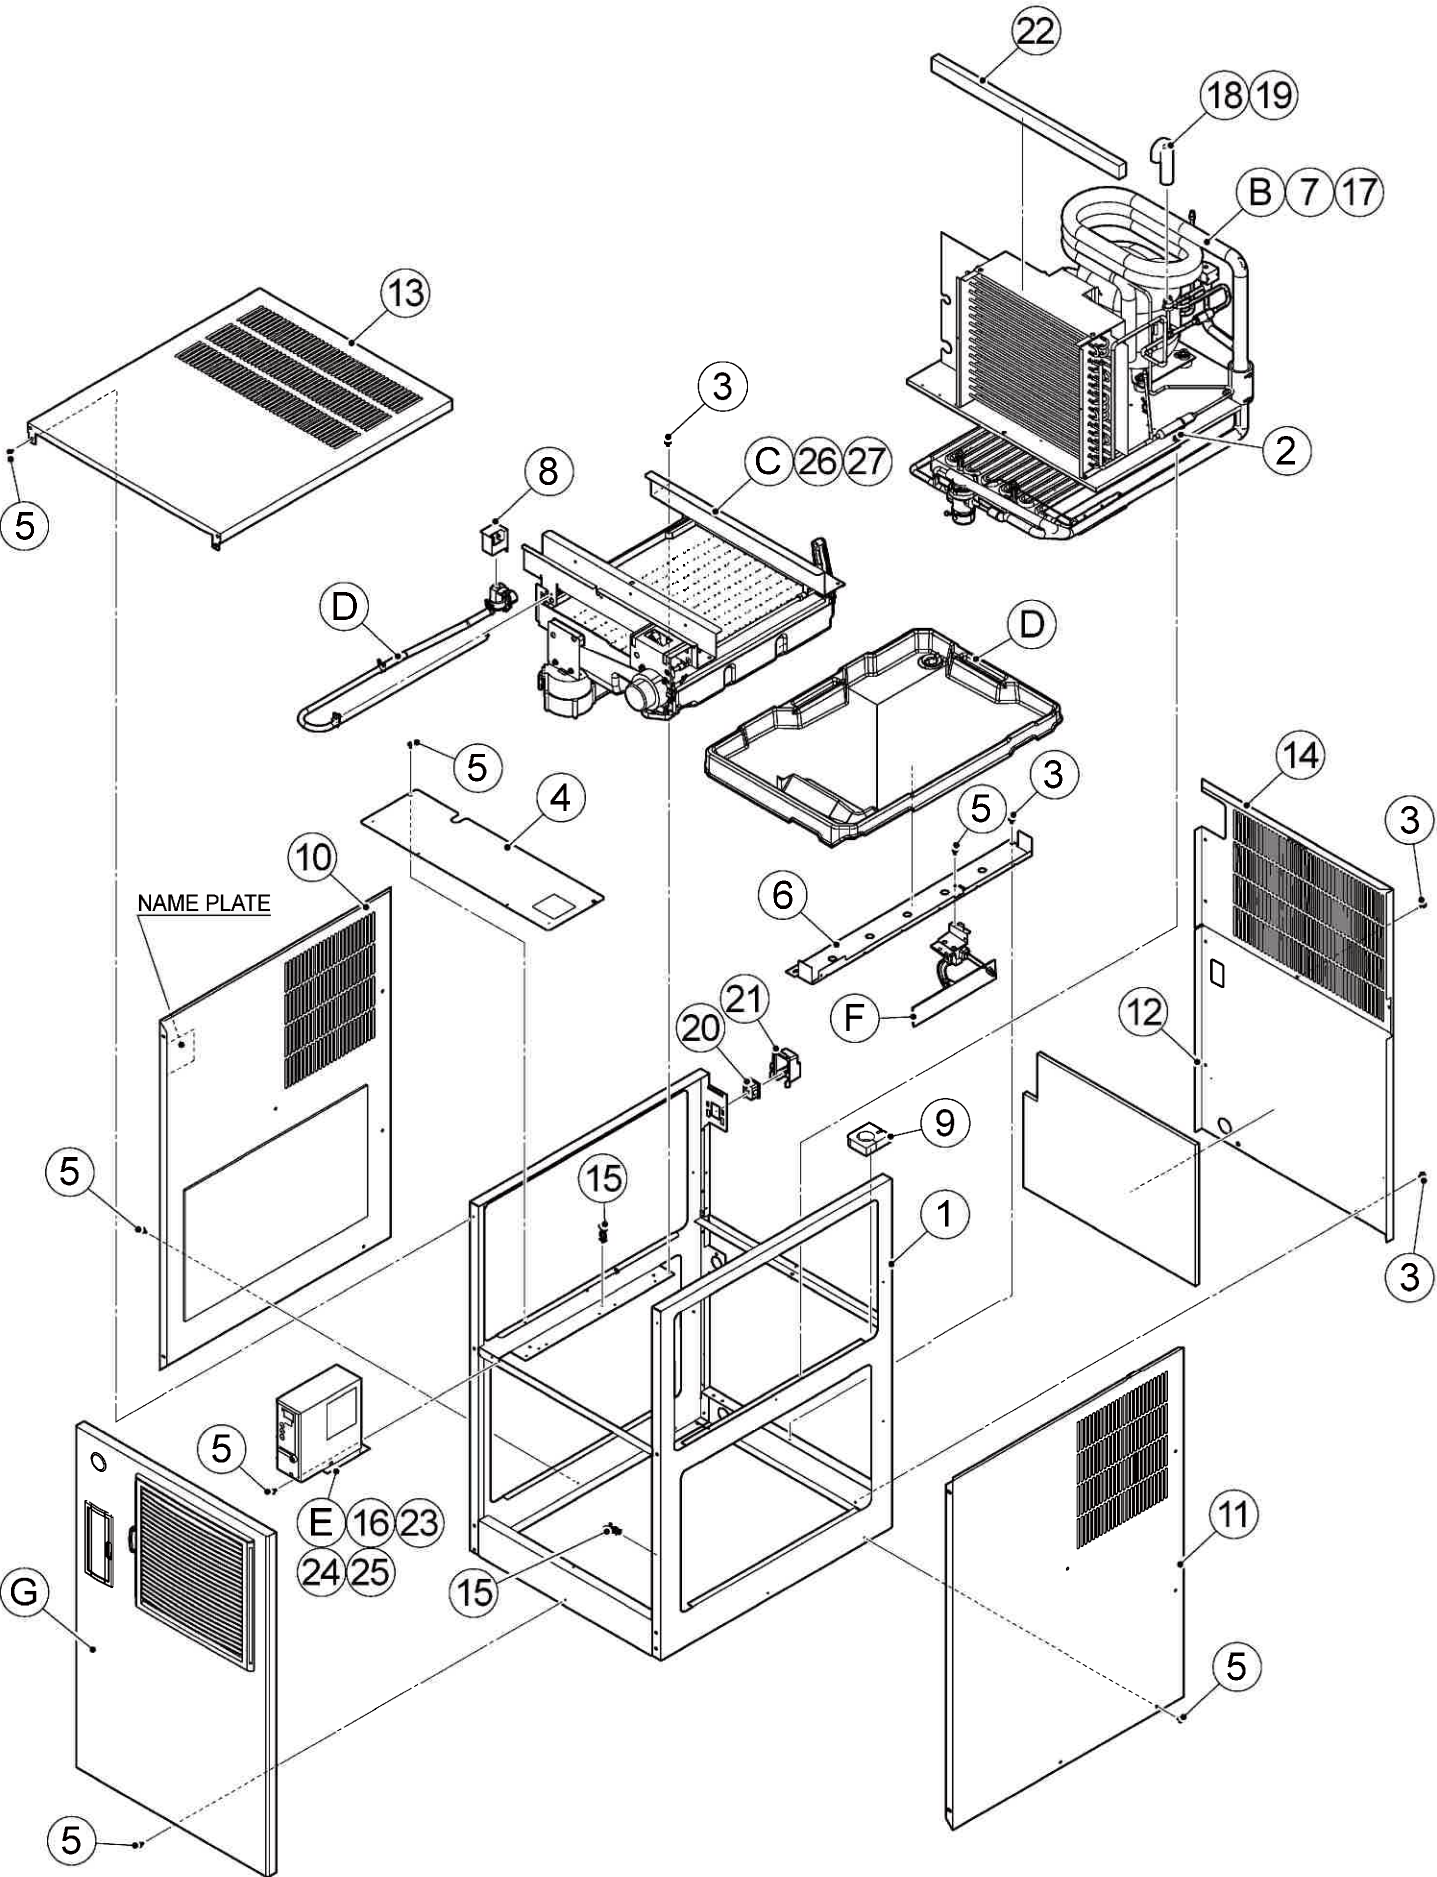


MODEL: **IM-240APE(-23,-32)**TITLE: **A. ICE FLAKER ASSY**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
B	REFRIGERATION ASSY		1E0185A01	1				
C	MECHANISM ASSY		1E0180A01	1				
D	WATER CIRCUIT ASSY		2X0229A01	1				
E	CONTROL BOX ASSY (A)		3E0346A04	1				
F	BIN CONTROL SW.		3E0426A05	1				
G	FRONT COVER ASSY		2E0300A01	1				
R	ACCESSORIES		A04662-01	1				
S	OPTIONAL PARTS		OPT-E1CP	1				
1	UNIT FRAME		1E0182G01	1				
2	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0620S0	4				
3	FLANGE BOLT (C-TITE)		FTR0408M0	19				
4	COVER - FRAME		3E0381G01	1				
5	TRUSS HEAD SCREW	28mm	FST0408S0	23				
		23mm/32mm	FST0408S0	22				
6	FRAME - BIN SWITCH		3E0009M01	1				
7	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S0	2				
8	COVER-WATER VALVE		3Y6277M01	1				
9	INSULATION		4Y0306-01	1				
10	SIDE PANEL(L)		2E0297G01	1				
11	SIDE PANEL (R)		2E0298G01	1				
12	REAR PANEL		2E0299G01	1				
13	TOP PANEL		2E0302M01	1				
14	REAR PANEL UP		2E0301M01	1				
15	CLAMP		P05216-01	5				
16	HARNESS		2E0276A01	1				
17	PAN HEAD MACHINE SCREW		FSP0408S0	1				
18	INSULATION TUBE		H71527130	1				
19	TIE	CV-150N,T30R	7920-0003	1				
20	CONNECTOR		P00246-01	1				
21	COVER - CONNECTOR		2X0271P01	1				
22	TOP INSULATION		4E0266Z01	1				
23	FERRITE CORE		P02369-01	1				
24	BAG		4X1559-07	5				

MODEL: **IM-240APE(-23,-32)**

TITLE: **A. ICE FLAKER ASSY**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
25	BAG		4X1559-01	1				
26	FERRITE CORE		P07383-01	2				
27	HARNESS (PM)		3E0449G01	1				

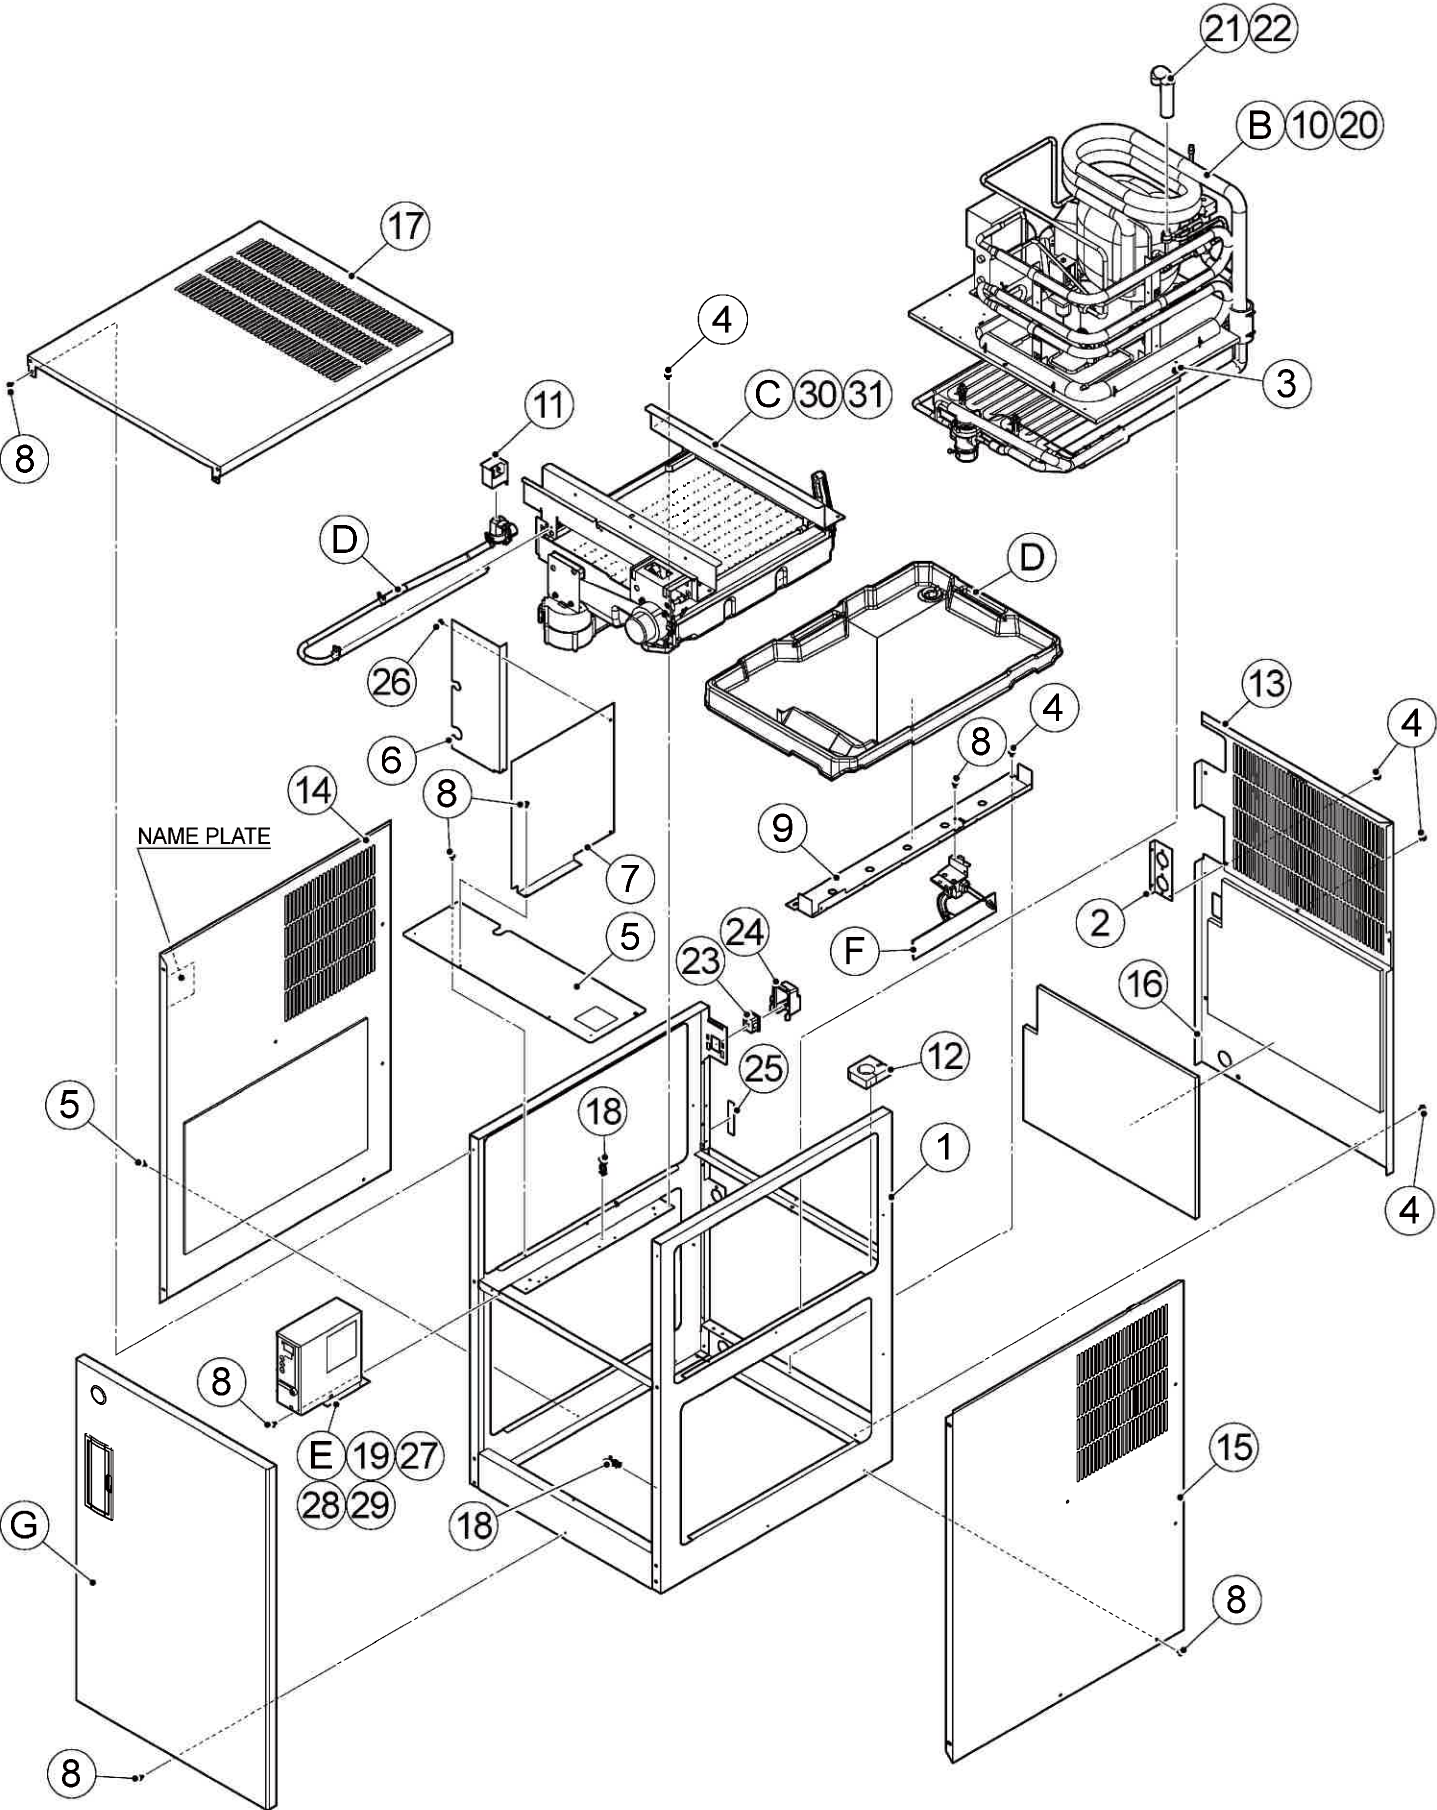


MODEL: **IM-240AWPE(-23)**TITLE: **A. ICE CUBER ASSY**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
B	REFRIGERATION ASSY		1E0186A01	1				
C	MECHANISM ASSY		1E0180A01	1				
D	WATER CIRCUIT ASSY		2X0229A01	1				
E	CONTROL BOX ASSY (A)		3E0346A06	1				
F	BIN CONTROL SW.		3E0426A05	1				
G	FRONT COVER ASSY		2E0311A01	1				
R	ACCESSORIES		A04662-01	1				
S	OPTIONAL PARTS		OPT-E1CP	1				
1	UNIT FRAME		1E0182G01	1				
2	BRACKET - FITTING		4E0022M01	1				
3	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0620S0	4				
4	Flange Bolt (C-TITE)		FTR0408M0	21				
5	COVER - FRAME		3E0381G01	1				
6	BARRIER		3E0387M01	1				
7	GUIDE-A		3E0390M01	1				
8	TRUSS HEAD SCREW		FST0408S0	21				
9	FRAME - BIN SWITCH		3E0009M01	1				
10	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S0	2				
11	COVER-WATER VALVE		3Y6277M01	1				
12	INSULATION		4Y0306-01	1				
13	REAR PANEL UP		2E0301M02	1				
14	SIDE PANEL(L)		2E0297G01	1				
15	SIDE PANEL (R)		2E0298G01	1				
16	REAR PANEL		2E0299G01	1				
17	TOP PANEL		2E0302M01	1				
18	CLAMP		P05216-01	5				
19	HARNESS		2E0276A01	1				
20	PAN HEAD MACHINE SCREW		FSP0408S0	1				
21	INSULATION TUBE		H71527130	1				
22	TIE		7920-0003	1				
23	CONNECTOR		P00246-01	1				
24	COVER - CONNECTOR		2X0271P01	1				
25	LABEL-CONNECTION		464541-01	1				

MODEL: **IM-240AWPE(-23)**

TITLE: **A. ICE CUBER ASSY**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
26	T2 TRUSS HEAD SCREW		FT20408F0	4				
27	FERRITE CORE		P02369-01	1				
28	BAG		4X1559-07	6				
29	BAG		4X1559-01	1				
30	FERRITE CORE		P07383-01	2				
31	HARNESS (PM)		3E0449G01	1				

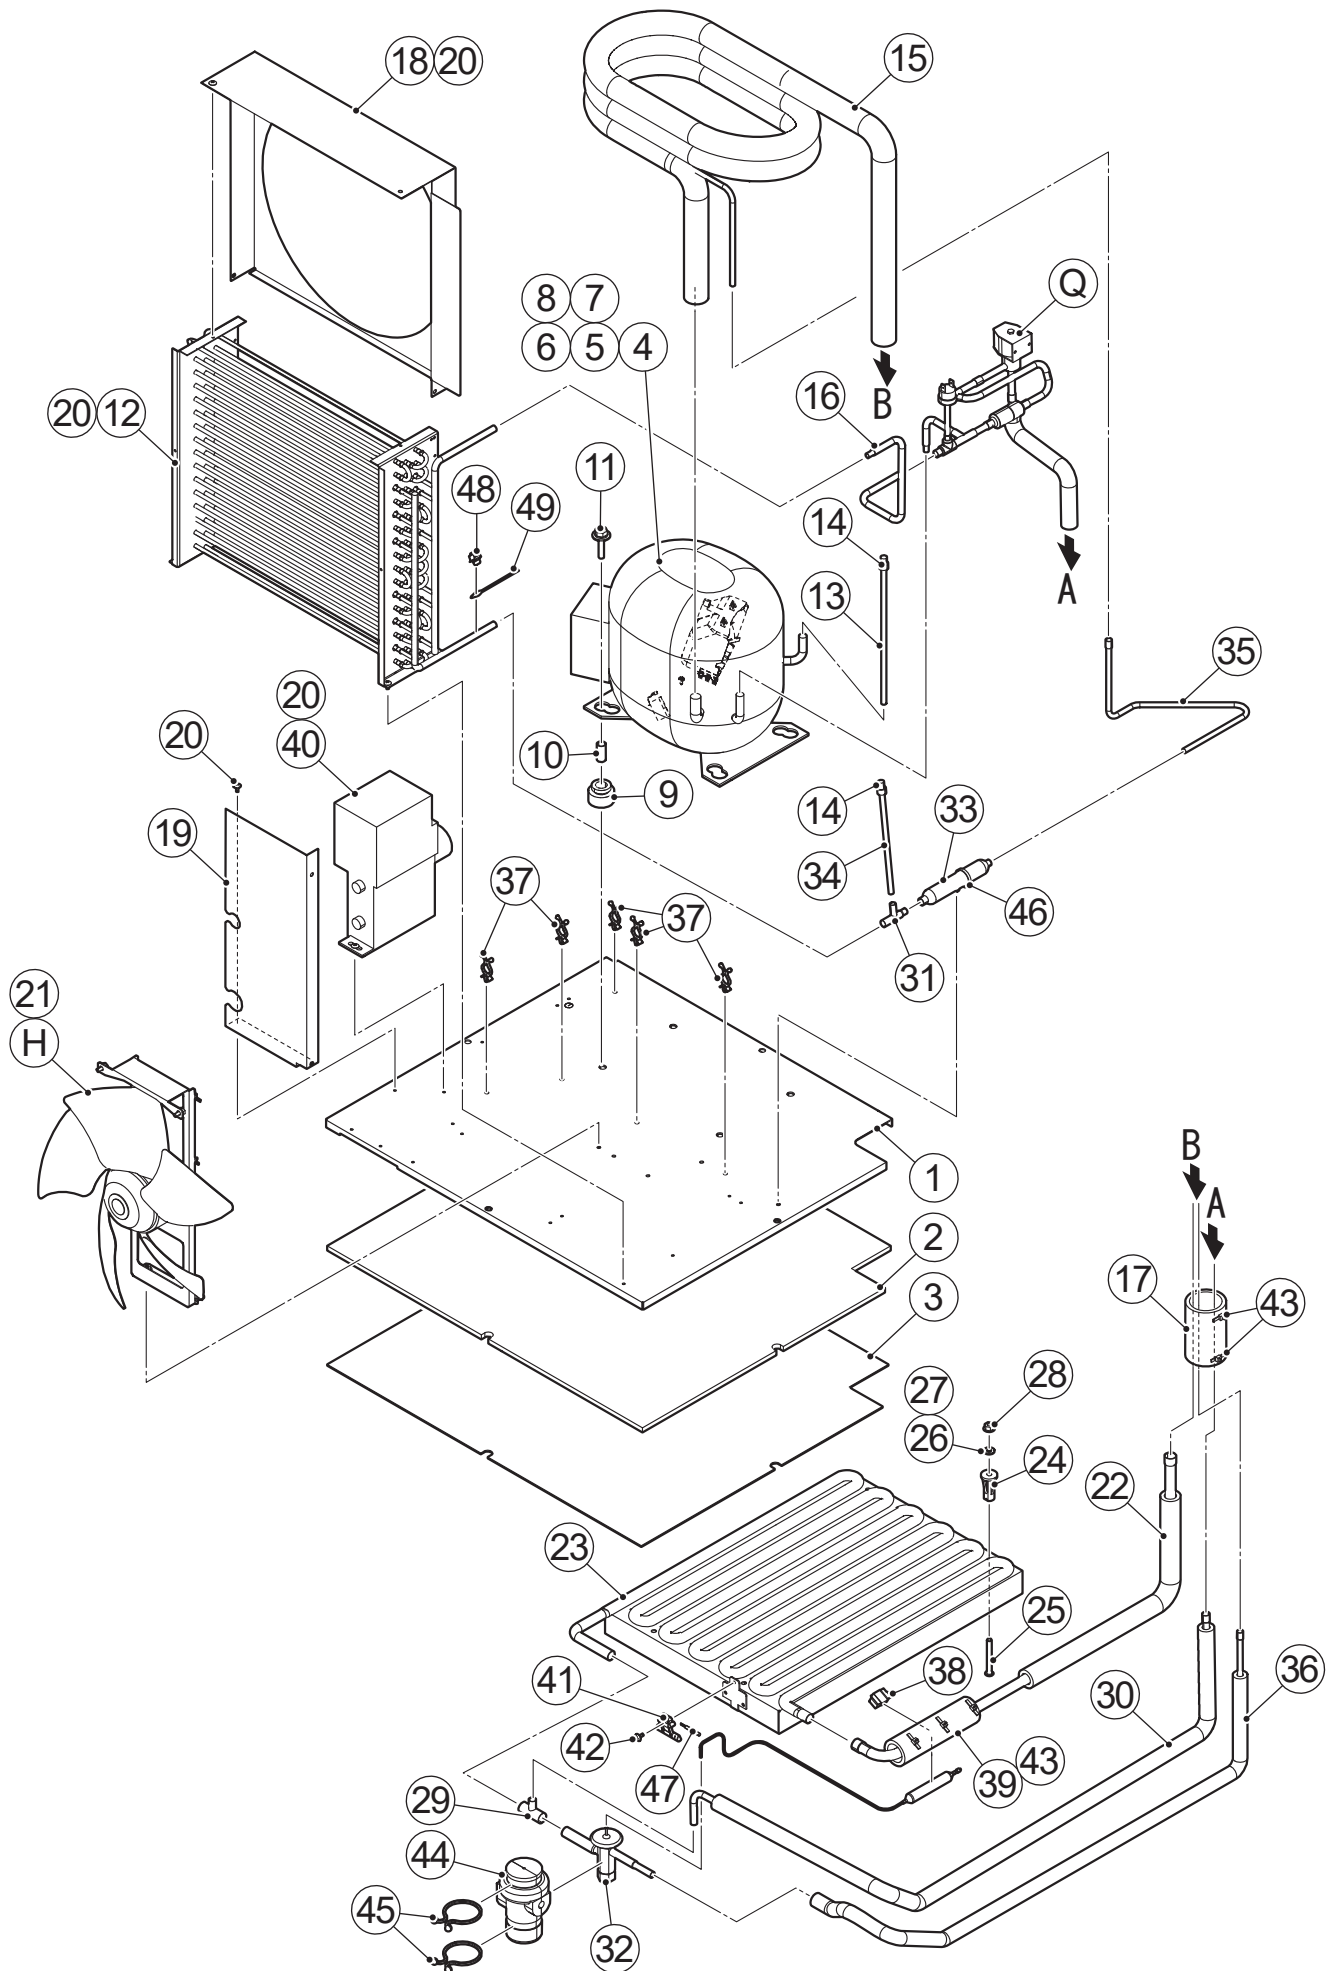


MODEL: **IM-240APE(-23,-32)**TITLE: **B. REFRIGERATION CIRCUIT**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
H	FAN MOTOR ASSY		3E0362A01	1				
Q	COPPER TUBE (E) - HG		3E0389G01	1				
1	BASE		3E0380G01	1				
2	INSULATION - BASE		4Y6898P01	1				
3	PLATE/BASE		4Y0249-01	1				
4	COMPRESSOR		P02809-01	1				
5	PROTECTOR		P02812-01	1				
6	PROTECTOR RETAINER		P02815-01	1				
7	TERMINAL COVER		P02814-01	1				
8	SCREW		P00840-01	1				
9	GROMMET		P00846-01	4				
10	SPACER		P00847-01	4				
11	BOLT		436206-03	4				
12	CONDENSER		E00004-01	1				
13	COPPER TUBE (F) - L		477818M01	1				
14	LOCKRING STOPPER		P01677-01	2				
15	HEAT EXCHANGER		4E0255G01	1				
16	COPPER TUBE D		4E0263M01	1				
17	INSULATION TUBE		H72636A80	1				
18	SHROUD		2E0260M02	1				
19	BARRIER		3E0387M01	1				
20	T2 TRUSS HEAD SCREW		FT20408F0	13				
21	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S0	4				
22	COPPER TUBE (A) - LOW SIDE		3Y5353G01	1				
23	EVAPORATOR	28mm	2X6691G01	1				
		23mm	2X6735G01	1				
		32mm	2X6736G01	1				
24	COLLAR		3H3879-01	4				
25	SCREW-EVAPORATOR	28mm/32mm	4Y4922M02	4				
		23mm	4Y4922M03	4				
26	WASHER		4H0777-01	4				
27	WASHER	23mm	4H1365-05	4				
28	FLANGE NUT		FNHF06S0	4				

MODEL: **IM-240APE(-23,-32)**TITLE: **B. REFRIGERATION CIRCUIT**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
29	TEE		420041-27	1				
30	COPPER TUBE C - HG		2X4283G01	1				
31	TEE		420041-03	1				
32	EXPANSION VALVE		P02819-01	1				
33	DRIER		P06910-01	1				
34	COPPER TUBE C - COND		477814M01	1				
35	COPPER TUBE E		4E0253M01	1				
36	COPPER TUBE (E) - H		3E0404G01	1				
37	CLAMP		P05216-01	5				
38	CLAMP		443461-01	1				
39	INSULATION		4X8643-01	1				
40	BOX WITH ELECTRICAL COMPONENTS		P02841-01	1				
41	HOLDER - THERMISTOR		315479-01	1				
42	S-TITE TRUSS HEAD SCREW		FTS0408M0	1				
43	TIE	CV-150N,T30R	7920-0003	5				
44	VALVE COVER		3Y3051P01	1				
45	CLAMP		P00752-01	2				
46	CABLE TIE		P05042-01	1				
47	THERMISTOR-CUBE CONTROL		P00350-01	1				
48	THERMISTOR-FILTER		4R2692-07	1				
49	CLIP-THERMISTOR		4R2938-01	1				

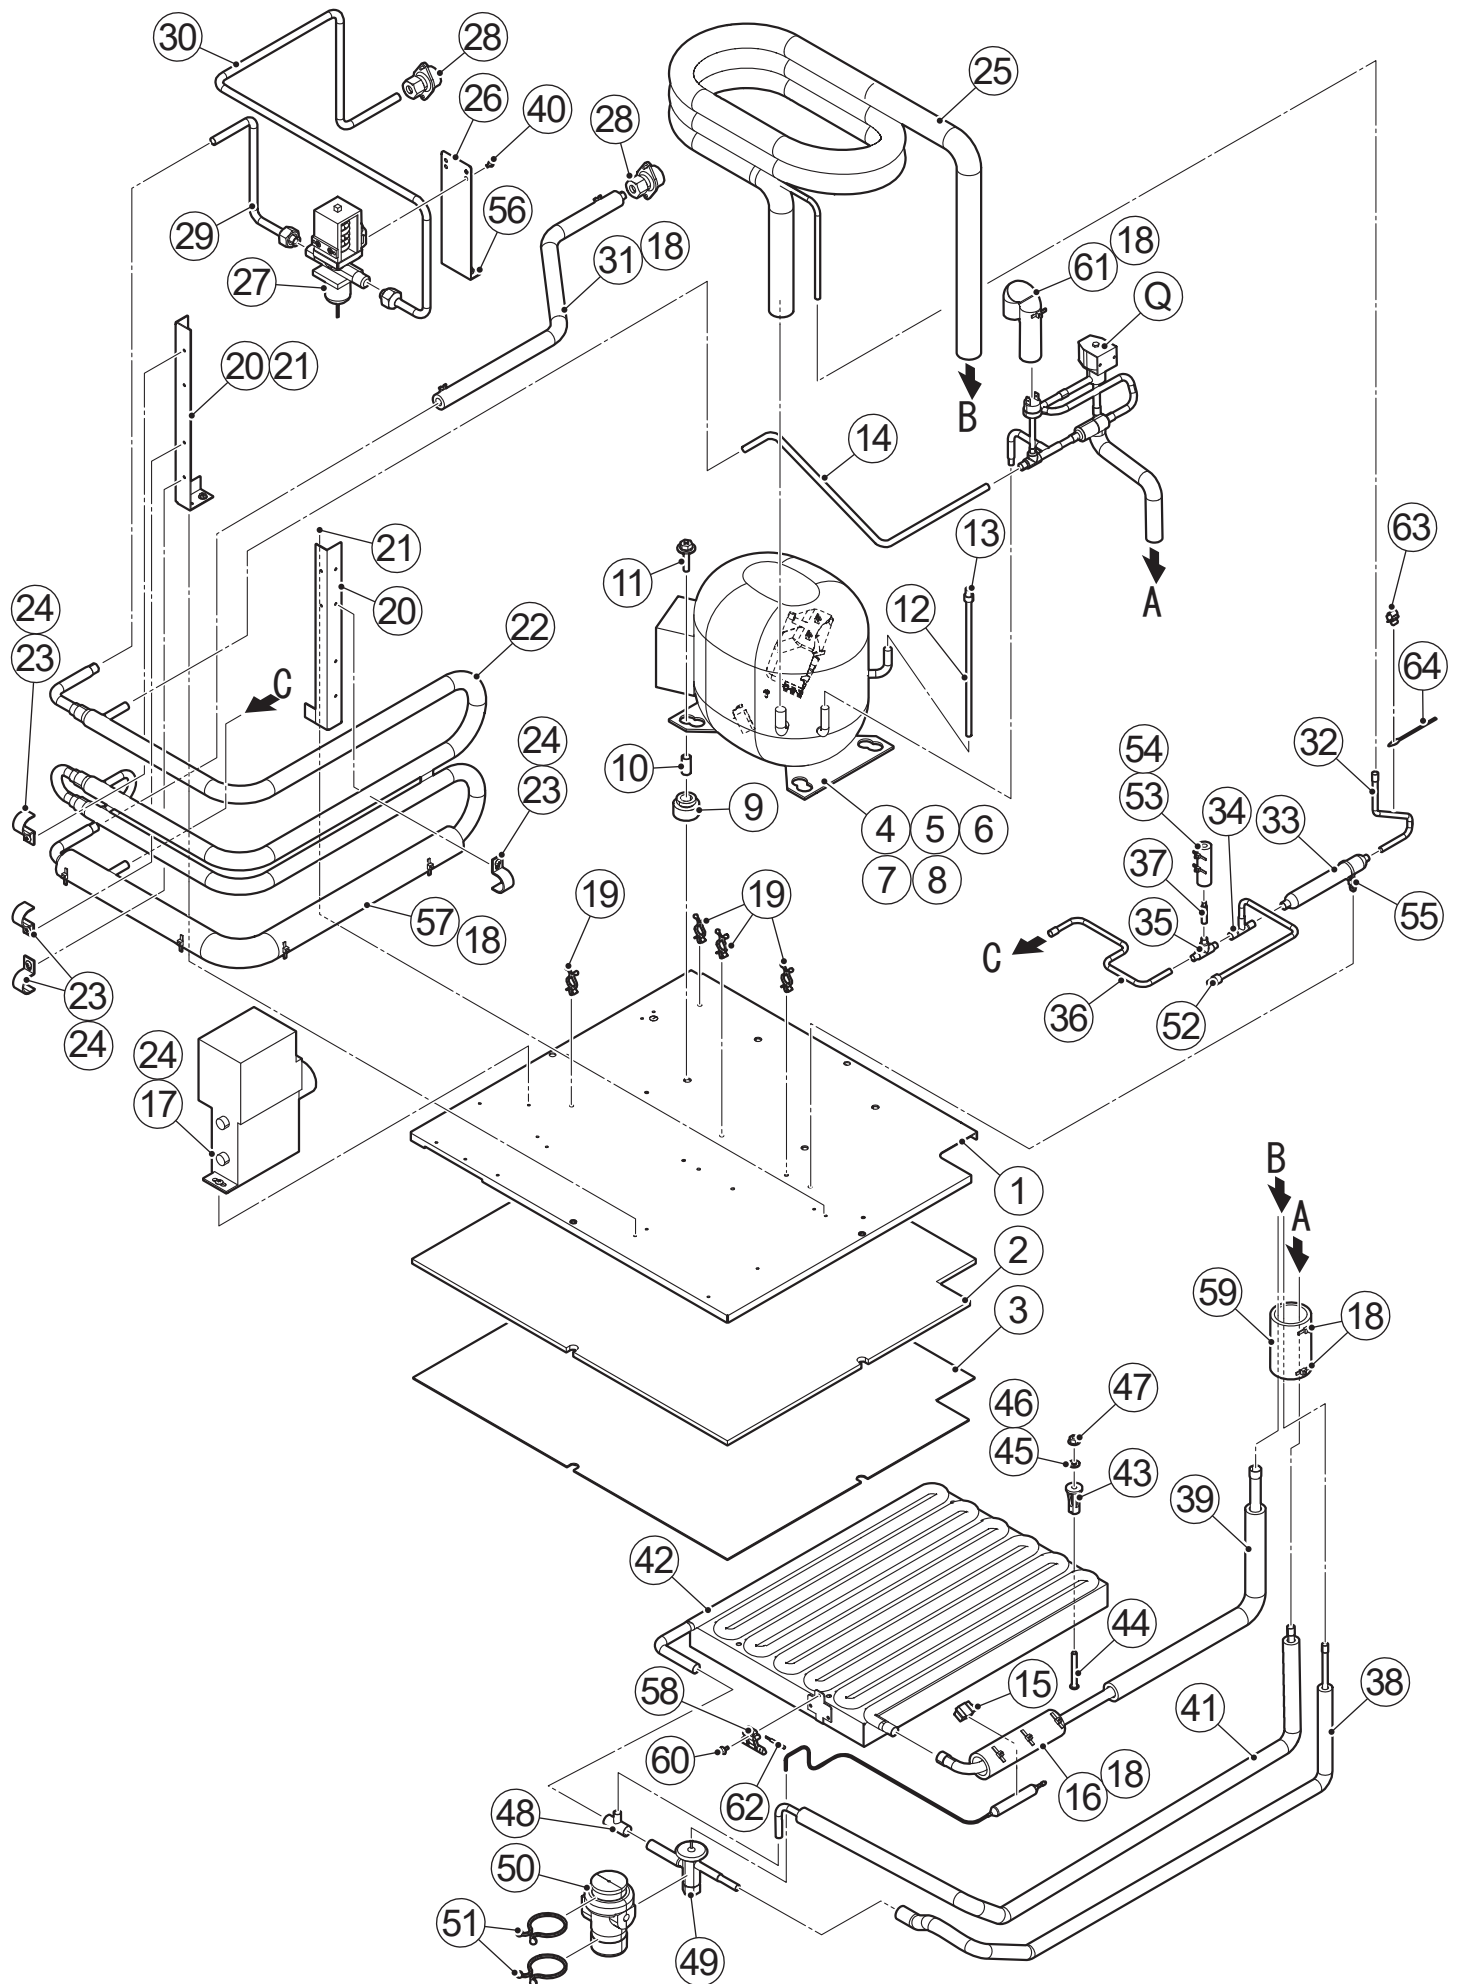

MODEL: **IM-240AWPE(-23)**TITLE: **B. REFRIGERATION CIRCUIT**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
Q	COPPER TUBE (E) - HG		3E0389G01	1				
1	BASE		3E0380G01	1				
2	INSULATION - BASE		4Y6898P01	1				
3	PLATE/BASE		4Y0249-01	1				
4	COMPRESSOR		P02809-01	1				
5	PROTECTOR		P02812-01	1				
6	PROTECTOR RETAINER		P02815-01	1				
7	TERMINAL COVER		P02814-01	1				
8	SCREW		P00840-01	1				
9	GROMMET		P00846-01	4				
10	SPACER		P00847-01	4				
11	BOLT		436206-03	4				
12	COPPER TUBE (F) - L		477818M01	1				
13	LOCKRING STOPPER		P01677-01	2				
14	COPPER TUBE(A)-HIGH SIDE		4E0275M01	1				
15	CLAMP		443461-01	1				
16	INSULATION		4X8643-01	1				
17	BOX WITH ELECTRICAL COMPONENTS		P02841-01	1				
18	TIE	CV-150N,T30R	7920-0003	13				
19	CLAMP		P05216-01	4				
20	MOUNTING BRACKET - CONDENSER		4E0121M01	2				
21	FLANGE BOLT (C-TITE)		FTR0408M0	4				
22	CONDENSER - WATER COOLED		2X4255G01	1				
23	CLAMP(B)-CONDENSER		4H0622-01	4				
24	T2 TRUSS HEAD SCREW		FT20408F0	6				
25	HEAT EXCHANGER		4E0255G01	1				
26	BRACKET - WATER REGULATOR		4E0134M01	1				
27	WATER REGULATOR		P05382-01	1				
28	FITTING(P)		3Y0747A01	2				
29	COPPER TUBE(B)-WATER		4E0270G01	1				
30	COPPER TUBE(C)-WATER		3E0388G01	1				
31	COPPER TUBE(A)-WATER		4E0271G01	1				
32	COPPER TUBE(C)-HIGH SIDE		4E0273M01	1				


MODEL: **IM-240AWPE(-23)**TITLE: **B. REFRIGERATION CIRCUIT**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
33	DRIER		458776-01	1				
34	TEE		4Y4060Z01	1				
35	TEE		456655-01	1				
36	COPPER TUBE(B)-HIGH SIDE		4E0272M01	1				
37	SLEEVE		441322-01	1				
38	COPPER TUBE (E) - H		3E0404G01	1				
39	COPPER TUBE (A) - LOW SIDE		3Y5353G01	1				
40	PAN HEAD SCREW		FSP0406S0	2				
41	COPPER TUBE C - HG		2X4283G01	1				
42	EVAPORATOR	28mm	2X6691G01	1				
		23mm	2X6735G01	1				
43	COLLAR		3H3879-01	4				
44	SCREW-EVAPORATOR	28mm	4Y4922M02	4				
		23mm	4Y4922M03	4				
45	WASHER		4H0777-01	4				
46	WASHER	23mm	4H1365-05	4				
47	FLANGE NUT		FNHF06S0	4				
48	TEE		420041-27	1				
49	EXPANSION VALVE		P03545-01	1				
50	VALVE COVER		3Y3051P01	1				
51	CLAMP		P00752-01	2				
52	PROCESS PIPE		4E0291M01	1				
53	INSULATION TUBE		H71020A55	1				
54	TIE	CV-100N,T18R	7920-0002	2				
55	CABLE TIE		P05042-01	1				
56	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0510S0	2				
57	INSULATION TUBE		H72636B65	1				
58	HOLDER - THERMISTOR		315479-01	1				
59	INSULATION TUBE		H72636A80	1				

MODEL: **IM-240AWPE(-23)**

TITLE: **B. REFRIGERATION CIRCUIT**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
60	S-TITE TRUSS HEAD SCREW		FTS0408M0	5				
61	INSULATION TUBE		H71527130	1				
62	THERMISTOR-CUBE CONTROL		P00350-01	1				
63	THERMISTOR-FILTER		4R2692-07	1				
64	CLIP-THERMISTOR		4R2938-01	1				

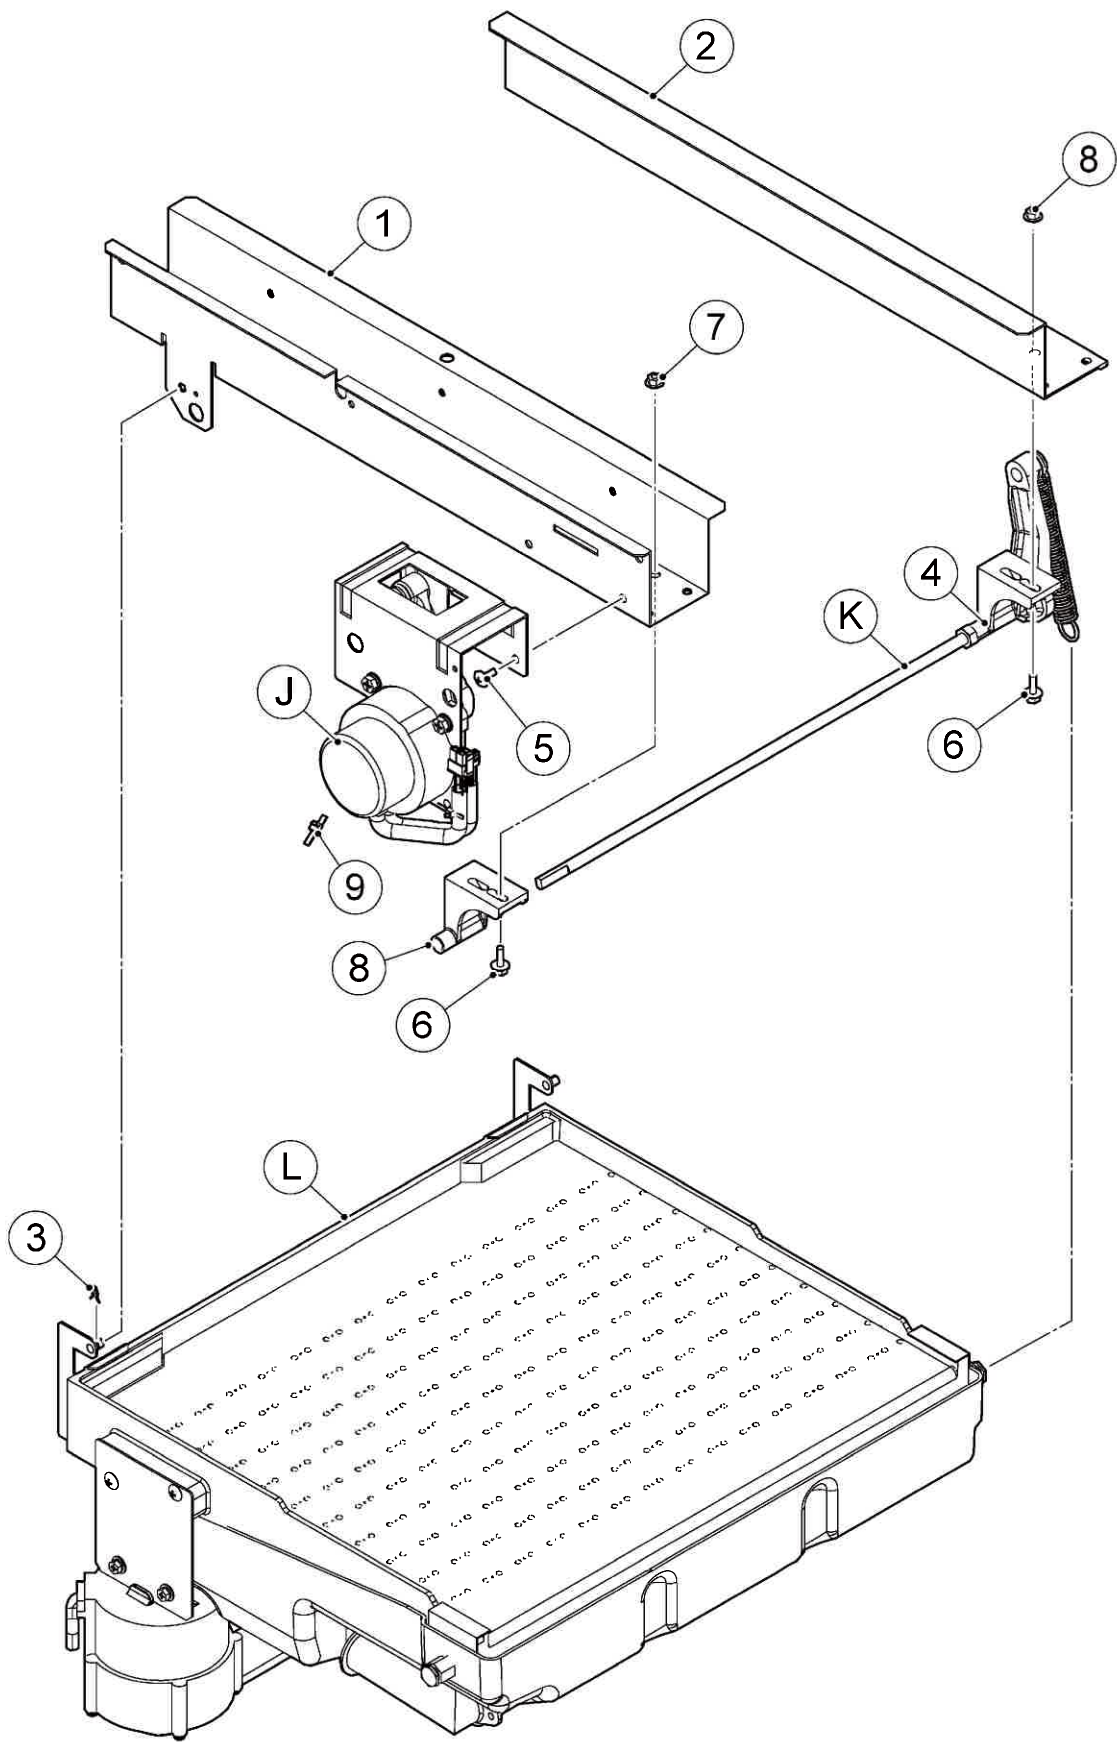

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **C. MECHANISM ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
J	ACTUATOR MOTOR ASSY		3E0188A06	1				
K	CAM SHAFT ASSY		3Y5364A02	1				
L	WATER PAN ASSY	28mm/23mm	1E0173A01	1				
		32mm	1E0173001	1				
1	FRAME - FRONT ASSY		2E0306G01	1				
2	REAR FRAME		2E0305M01	1				
3	RETAINING PIN	32mm	E00023-01	2				
4	COLLAR	32mm	429124-01	1				
5	TRUSS HEAD SCREW		FST0512S0	2				
6	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0516S0	4				
7	FLANGE NUT		FNHF05S0	4				
8	BEARING-CAM SHAFT		3X8307-02	1				
9	TIE	CV-150N,T30R	7920-0003	1				

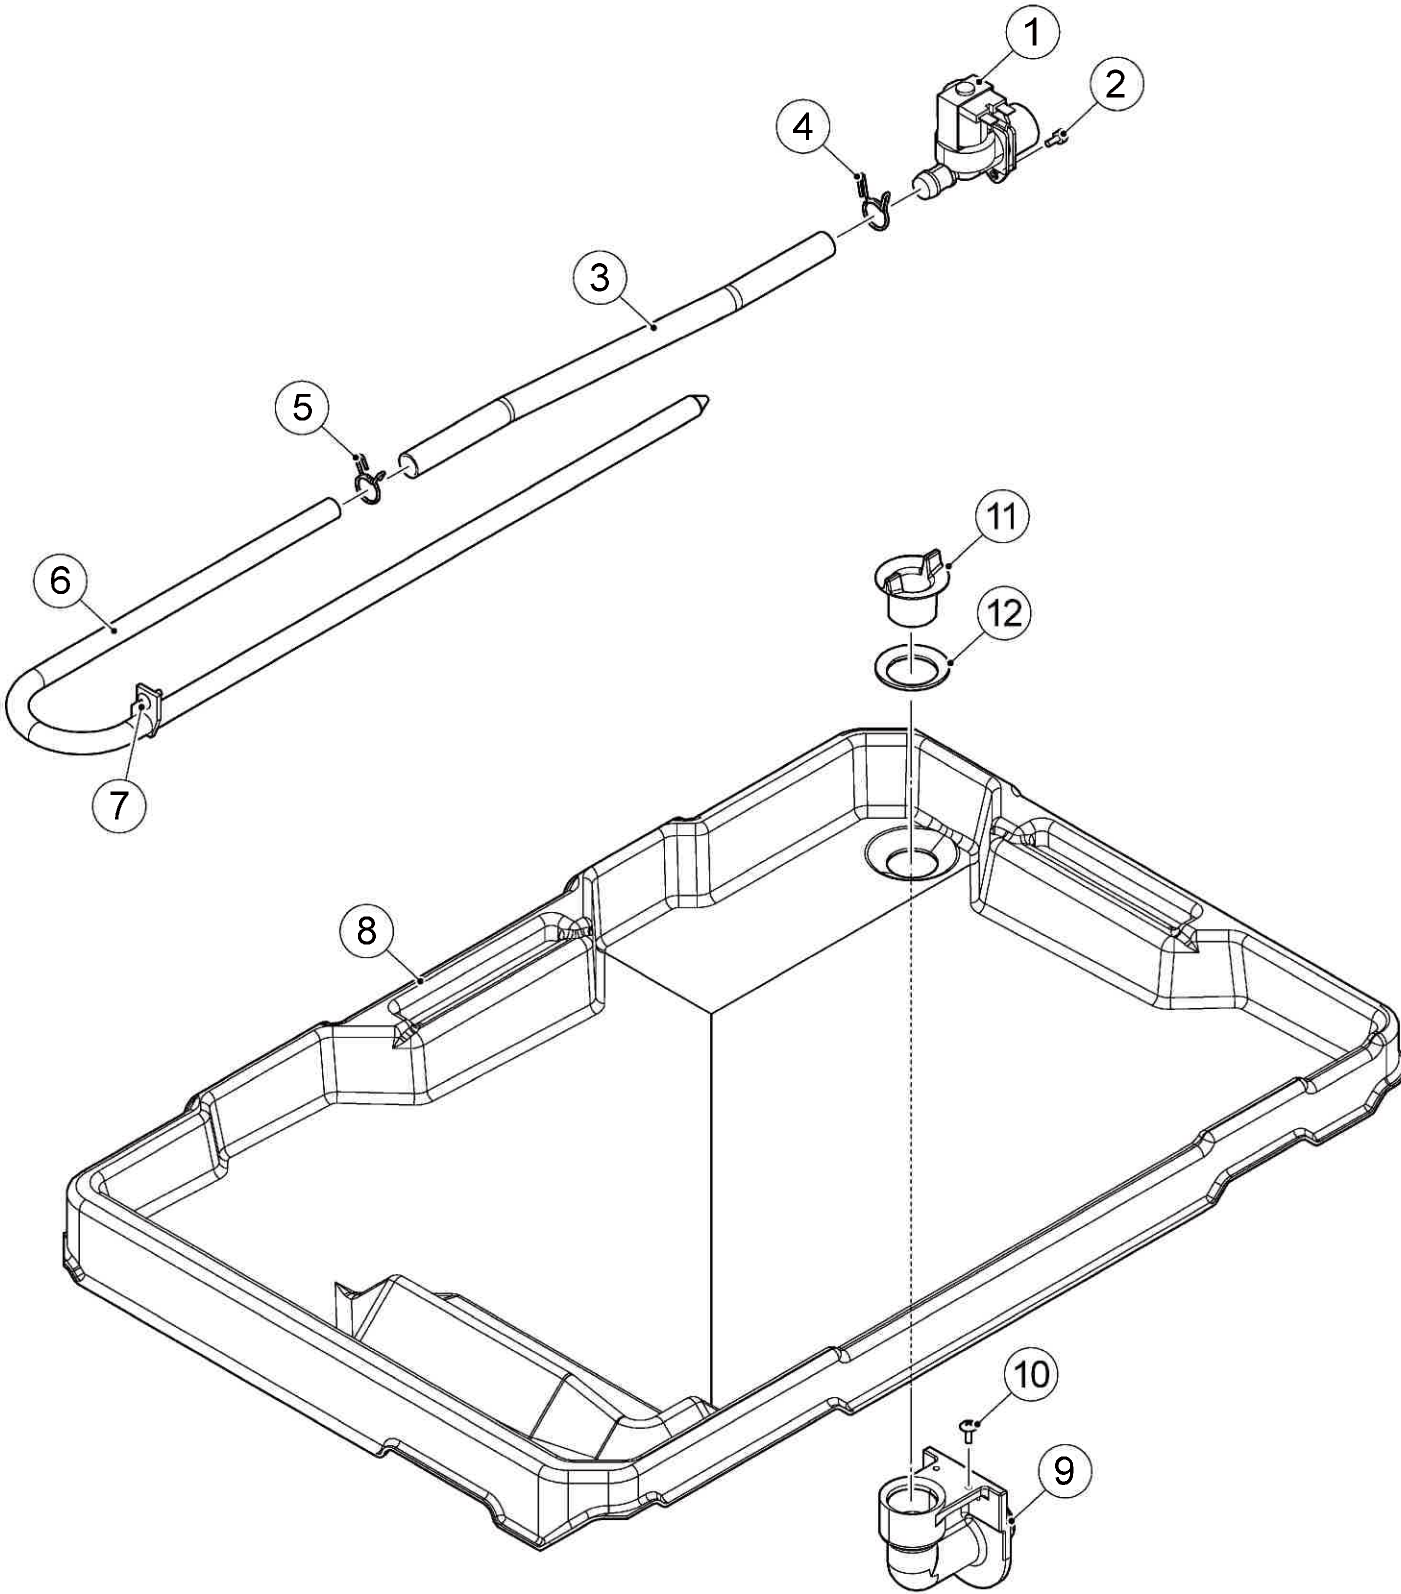

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **D. WATER CIRCUIT ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	WATER VALVE		P05355-01	1				
2	HEX SOCKET HEAD CAP SCREW		FBX0408S0	2				
3	SILICONE HOSE		4Y6912R11	1				
4	HOSE CLAMP		P05613-02	1				
5	HOSE CLAMP		P05613-01	1				
6	WATER SUPPLY PIPE		3H9533G01	1				
7	TRUSS HEAD SCREW		FST0412S0	1				
8	DRAIN PAN		125283P02	1				
9	DRAIN PIPE		315825-01	1				
10	T2 TRUSS HEAD SCREW		FT20410M0	2				
11	DRAIN YOKE		418296-01	1				
12	PACKING		413857-01	1				

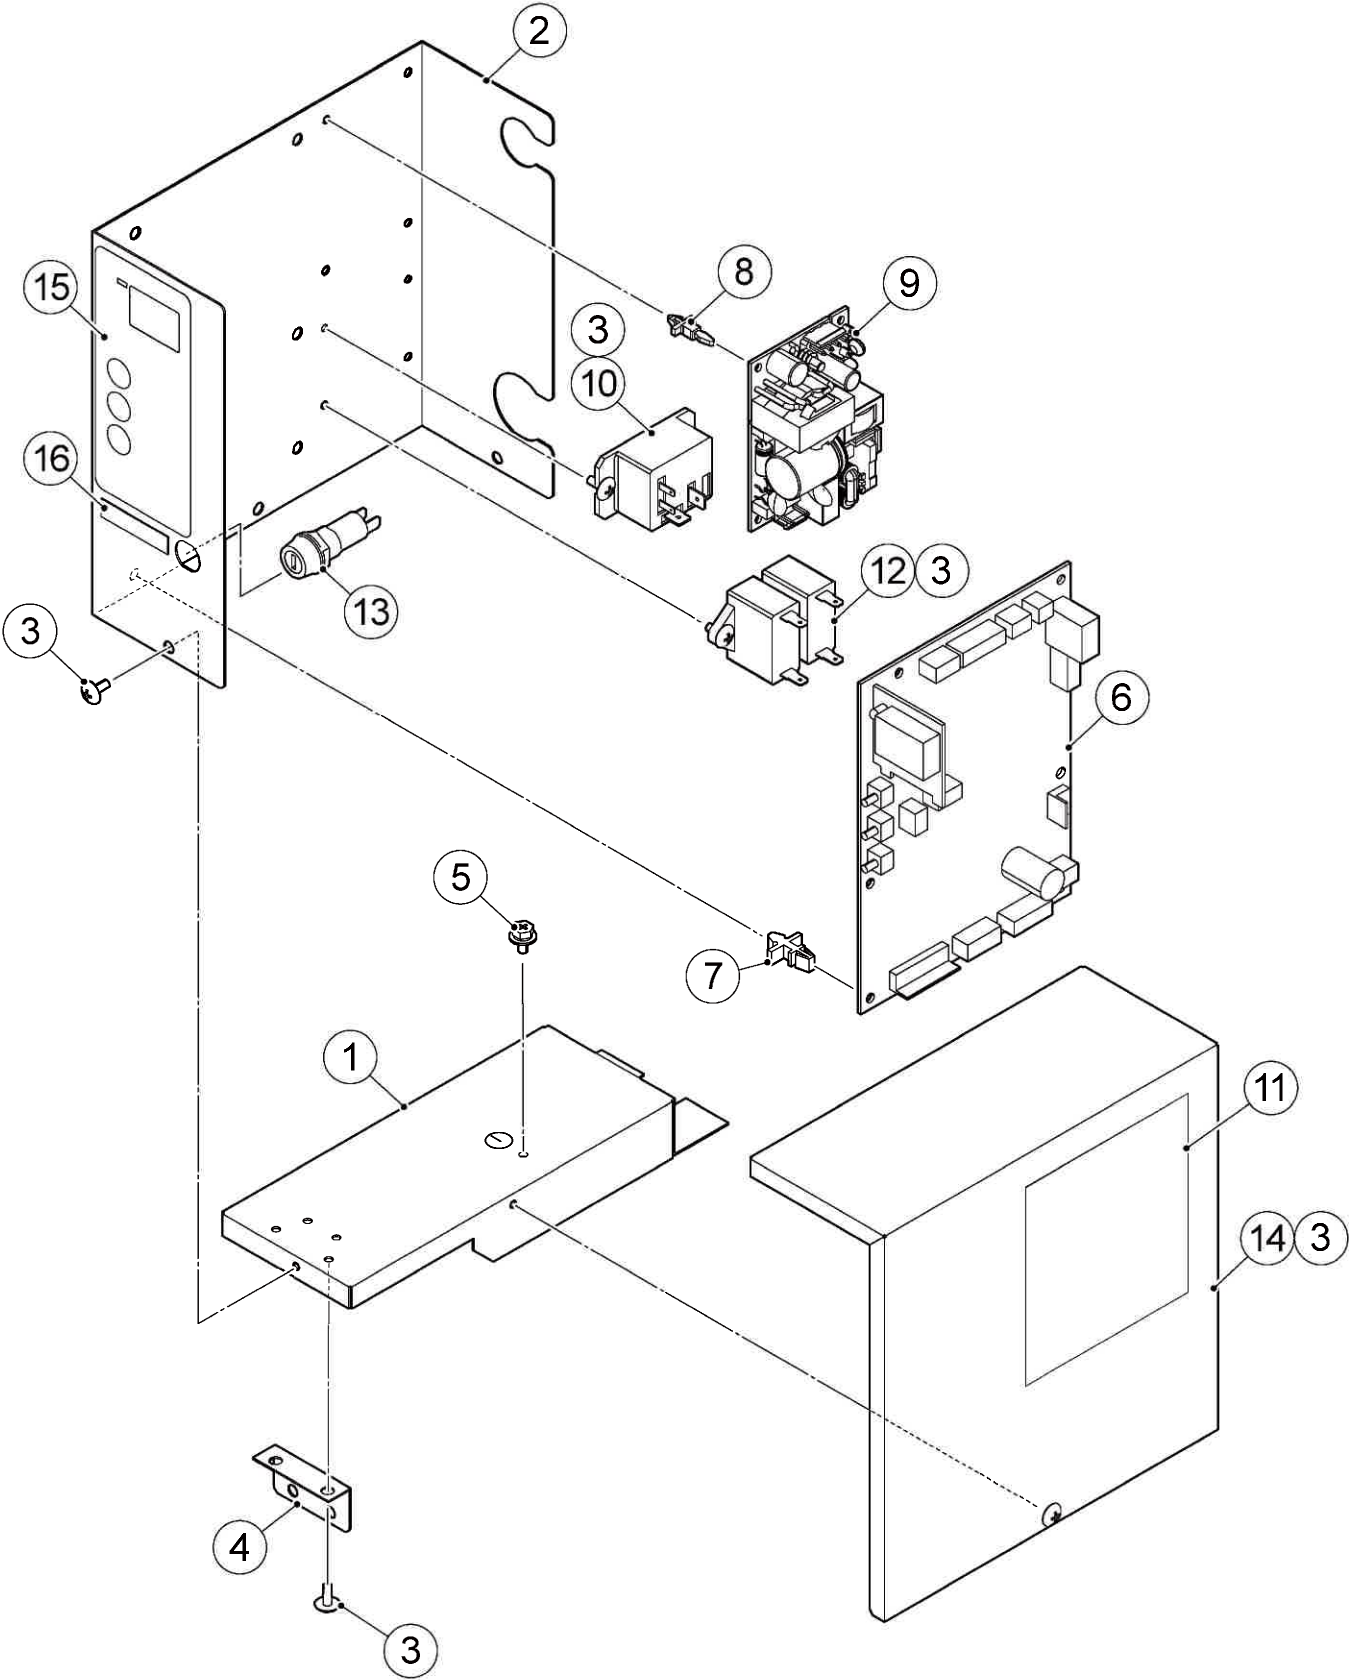

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **E. CONTROL BOX ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	CONTROL BOX (A)		3E0192M01	1				
2	CONTROL BOX (B)		2E0170M01	1				
3	T2 TRUSS HEAD SCREW		FT20408S0	10				
4	CONTROL BOX MOUNT (A)		4E0222M01	1				
5	HEX HEAD BOLT SW		FBK0408F0	1				
6	CONTROLLER BOARD		P06259-01	1				
7	BOARD SUPPORT		414929-02	6				
8	BOARD SUPPORT		E00003-01	4				
9	SWITCHING REGULATOR		P06372-01	1				
10	POWER RELAY		P06262-01	1				
11	WIRING LABEL	IM-240APE(-23,-32)	3E0392L01	1				
		IM-240AWPE(-23)	3E0393L01	1				
12	CAPACITOR		P01870-01	2				
13	FUSE ASSY		483425A01	1				
14	CONTROL BOX COVER		3Y5612M01	1				
15	CONTROL LABEL (A)		4E0132L01	1				
16	LABEL - FUSE		466798-01	1				

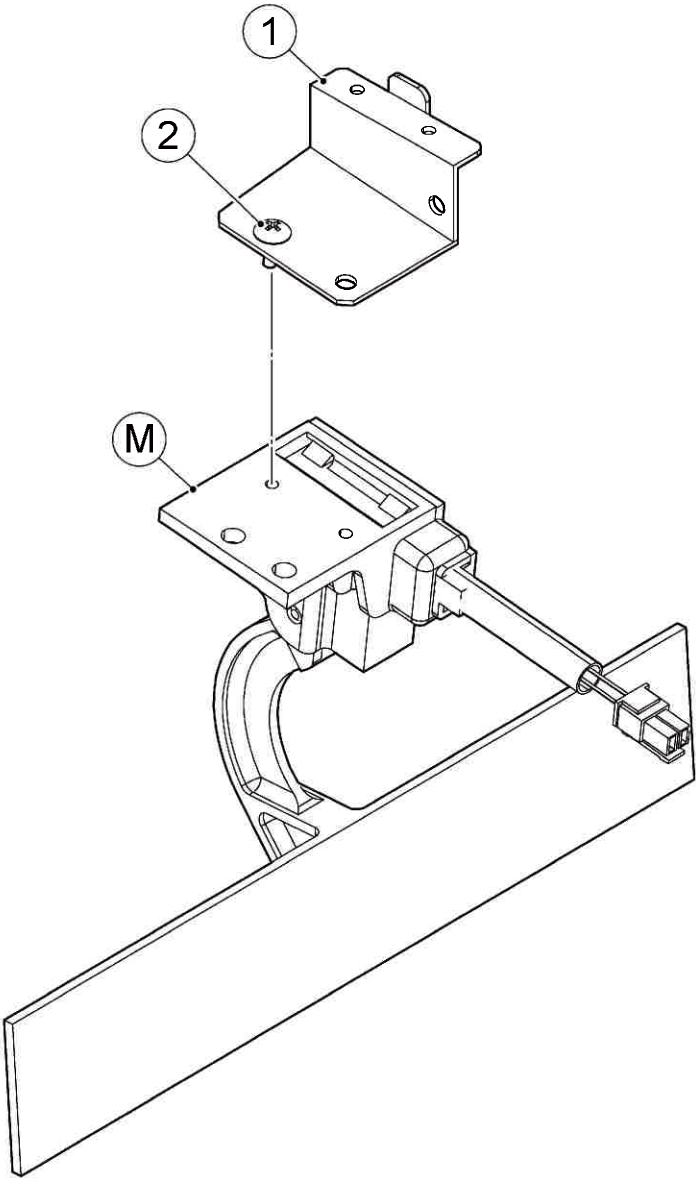


MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **F. BIN SWITCH-2 ASSY**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
M	BIN SWITCH ASSY		3Y5380A01	1				
1	BRACKET-BIN SWITCH		4Y6892M01	1				
2	T2 TRUSS HEAD SCREW		FT20410M0	2				

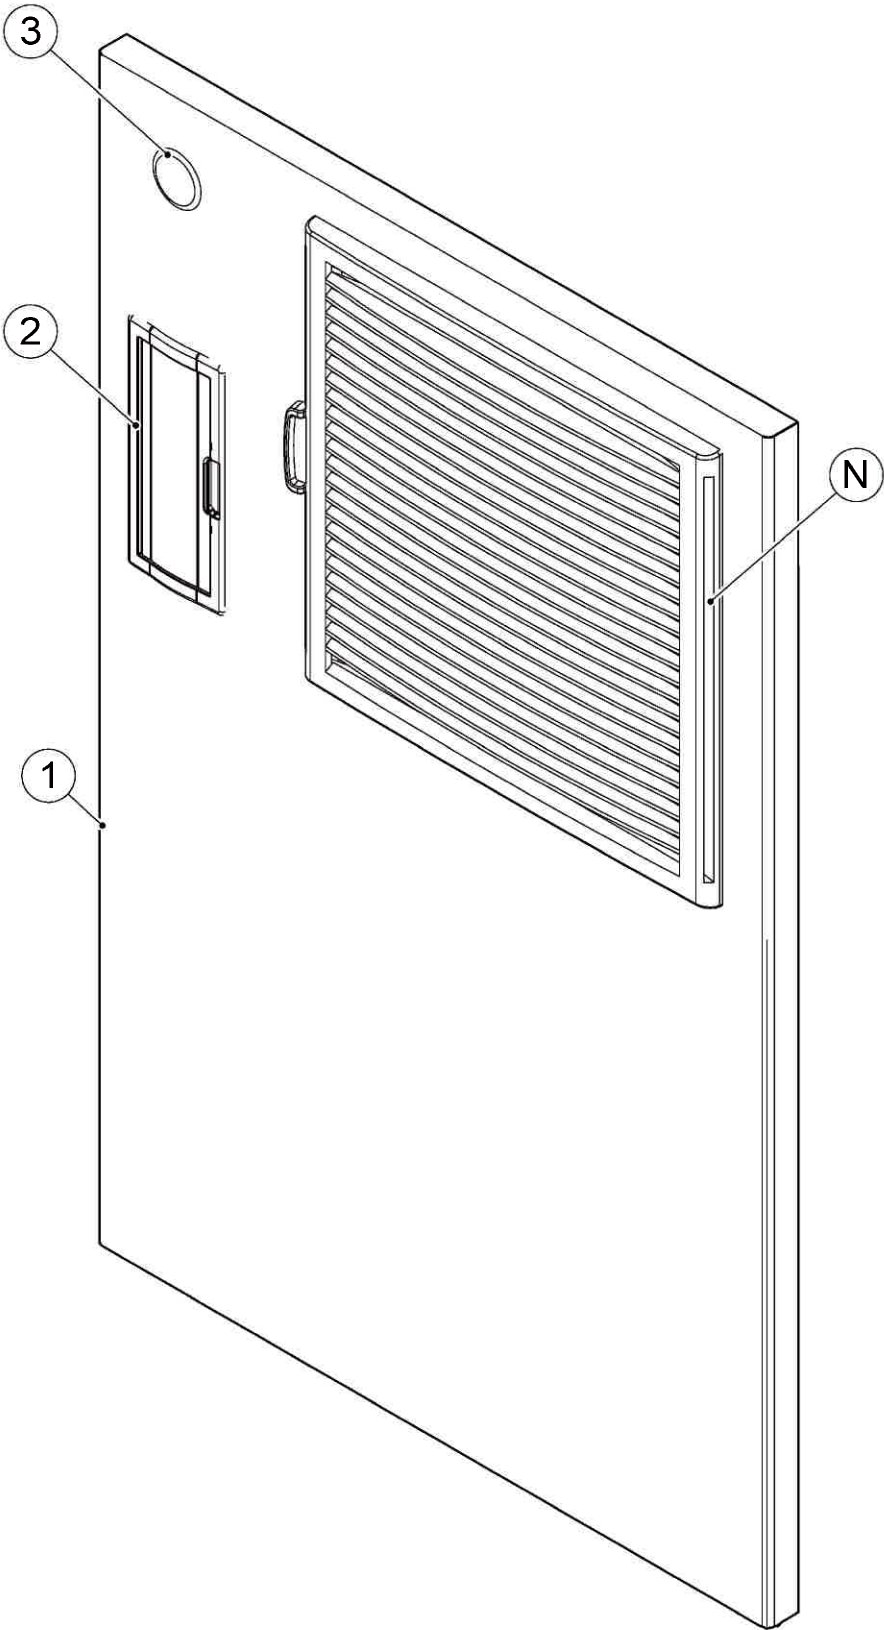


MODEL: IM-240APE(-23,-32) IM-240AWPE(-23) TITLE: G. FRONT COVER ASSY								
INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
N	LOUVER ASSY	Air-Cooled	377439A01	1				
1	FRONT COVER	Air-Cooled	3E0386G01	1				
		Water-Cooled	3E0386G02	1				
2	WINDOW PANEL ASSY		3E0285A01	1				
3	LABEL - PENGUIN		468184-02	1				

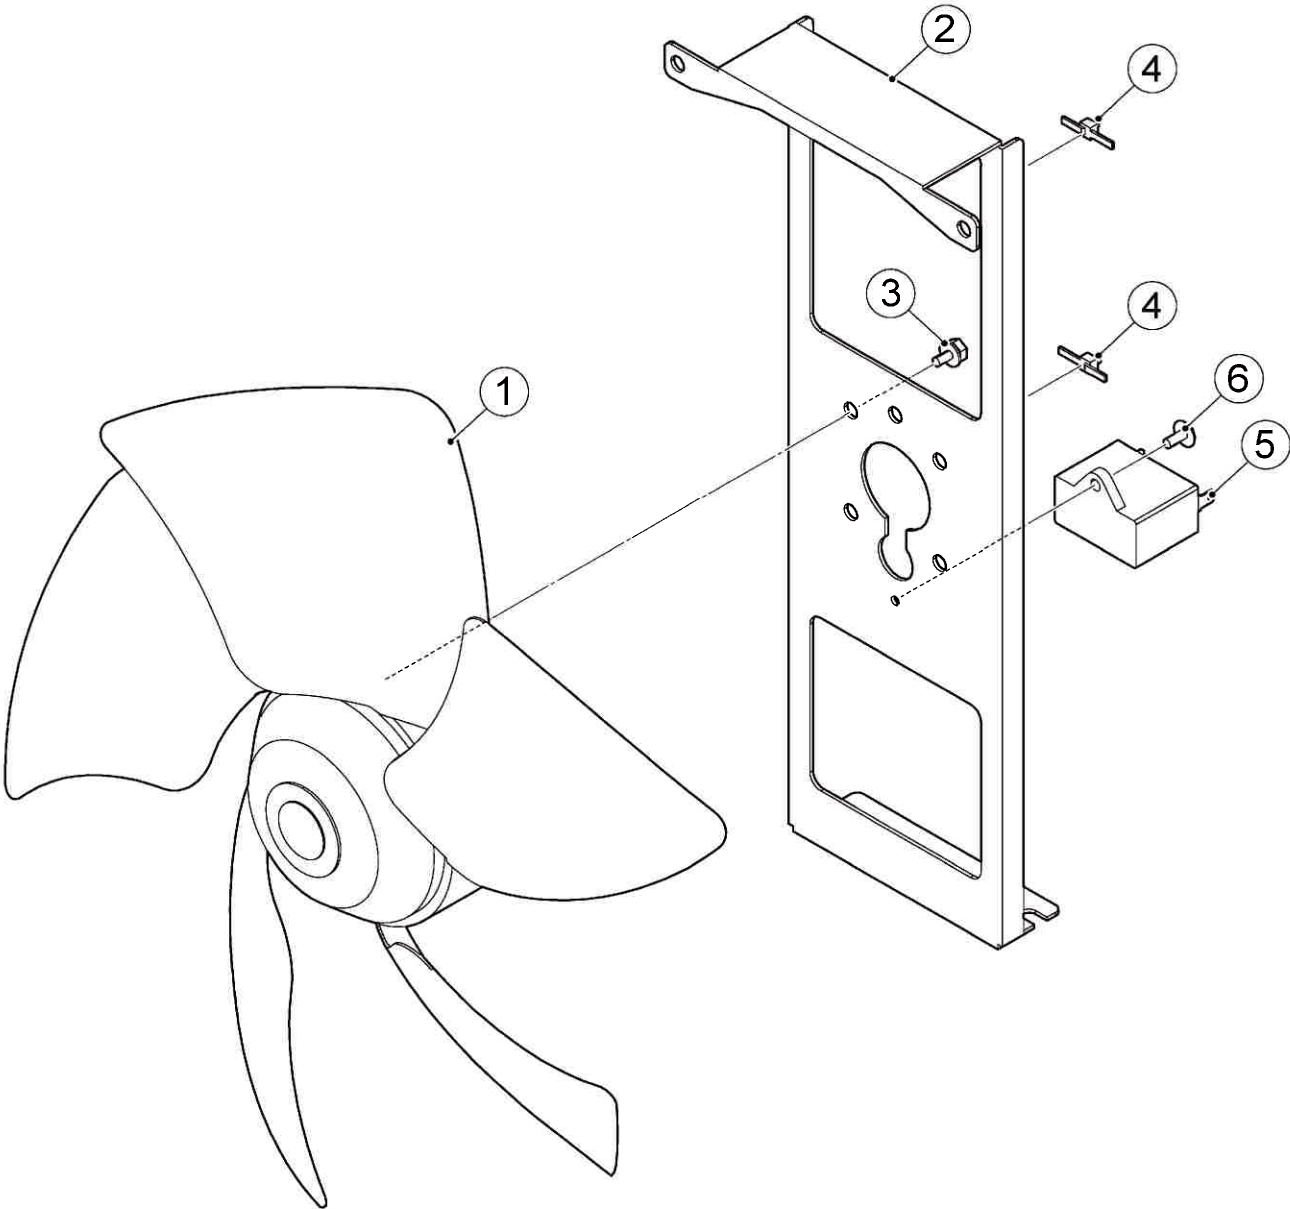

MODEL: **IM-240APE(-23,-32)**

TITLE: **H. FAN MOTOR ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	FAN MOTOR		P02545-01	1				
2	BRACKET-FM		3E0365M01	1				
3	HEX HEAD BOLT SW		FBK0408F0	4				
4	TIE	CV-100N,T18R	7920-0002	2				
5	CAPACITOR		P01865-01	1				
6	TRUSS HEAD SCREW		FST0408S0	1				

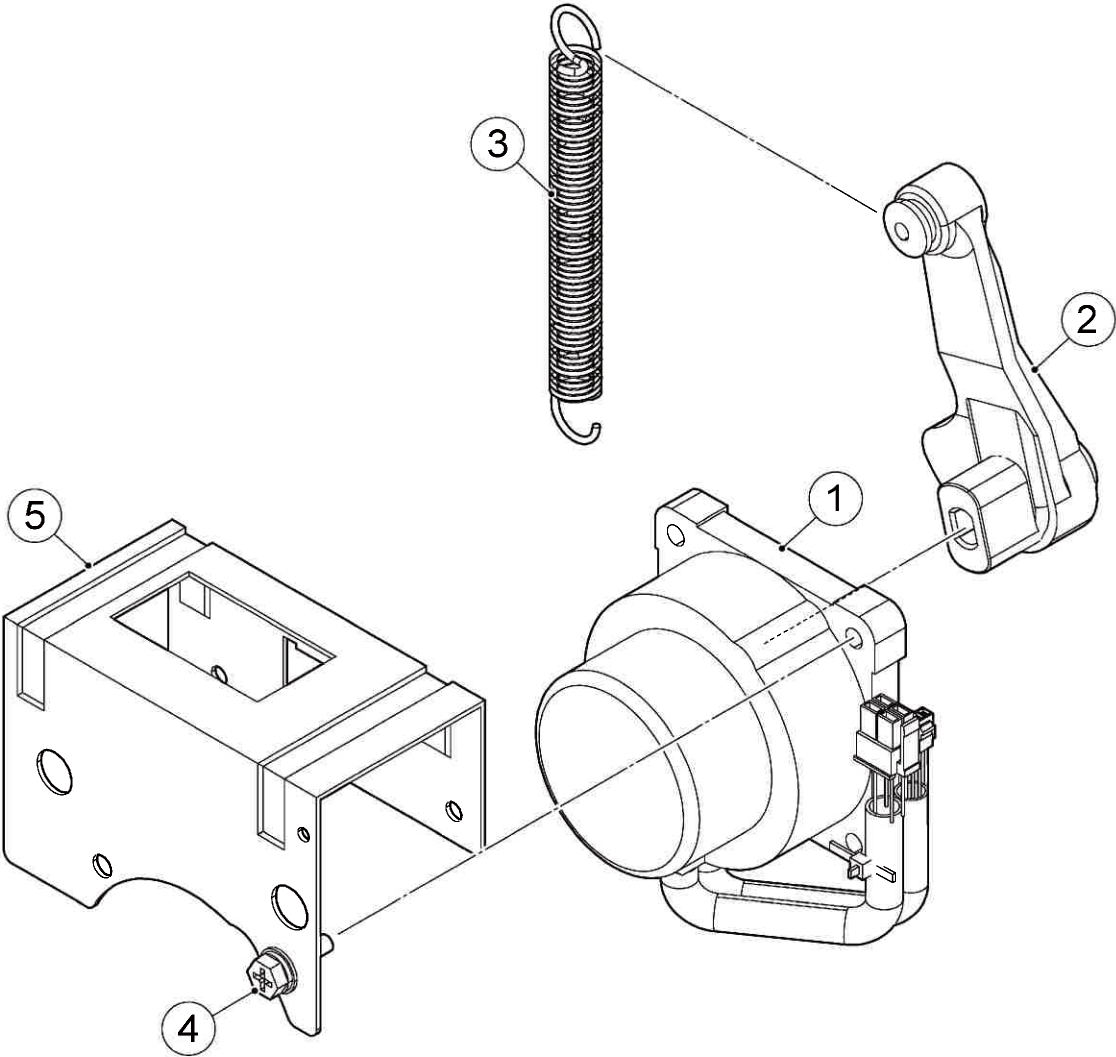

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **J. ACTUATOR MOTOR ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	AM ASSY (A)		4E0245G01	1				
2	CAM (A)		306543G04	1				
3	SPRING		4H0287-01	1				
4	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0620S0	2				
5	BRACKET-AM		3E0355M01	1				

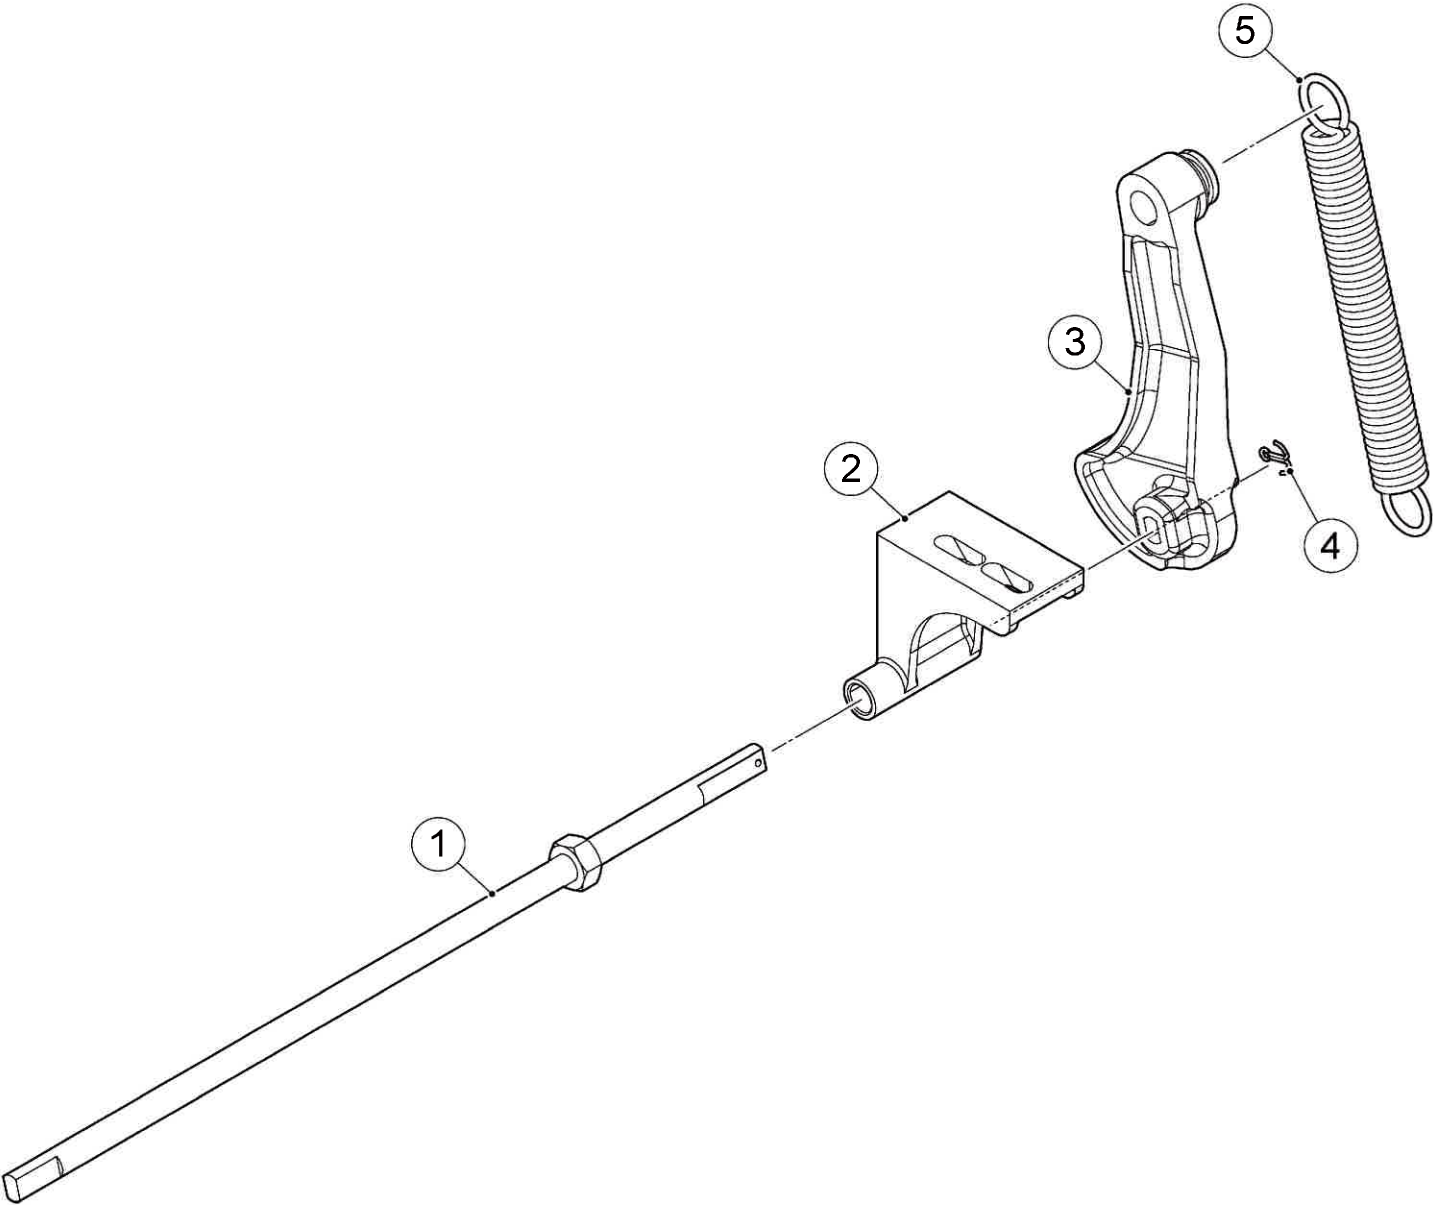

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **K. CAM SHAFT ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	CAM SHAFT		425511G02	1				
2	BEARING-CAM SHAFT		3X8307-02	1				
3	CAM(B)		376546P01	1				
4	CUTTER PIN		711S-0212	1				
5	EXTEN SPRING		4H3473-01	1				

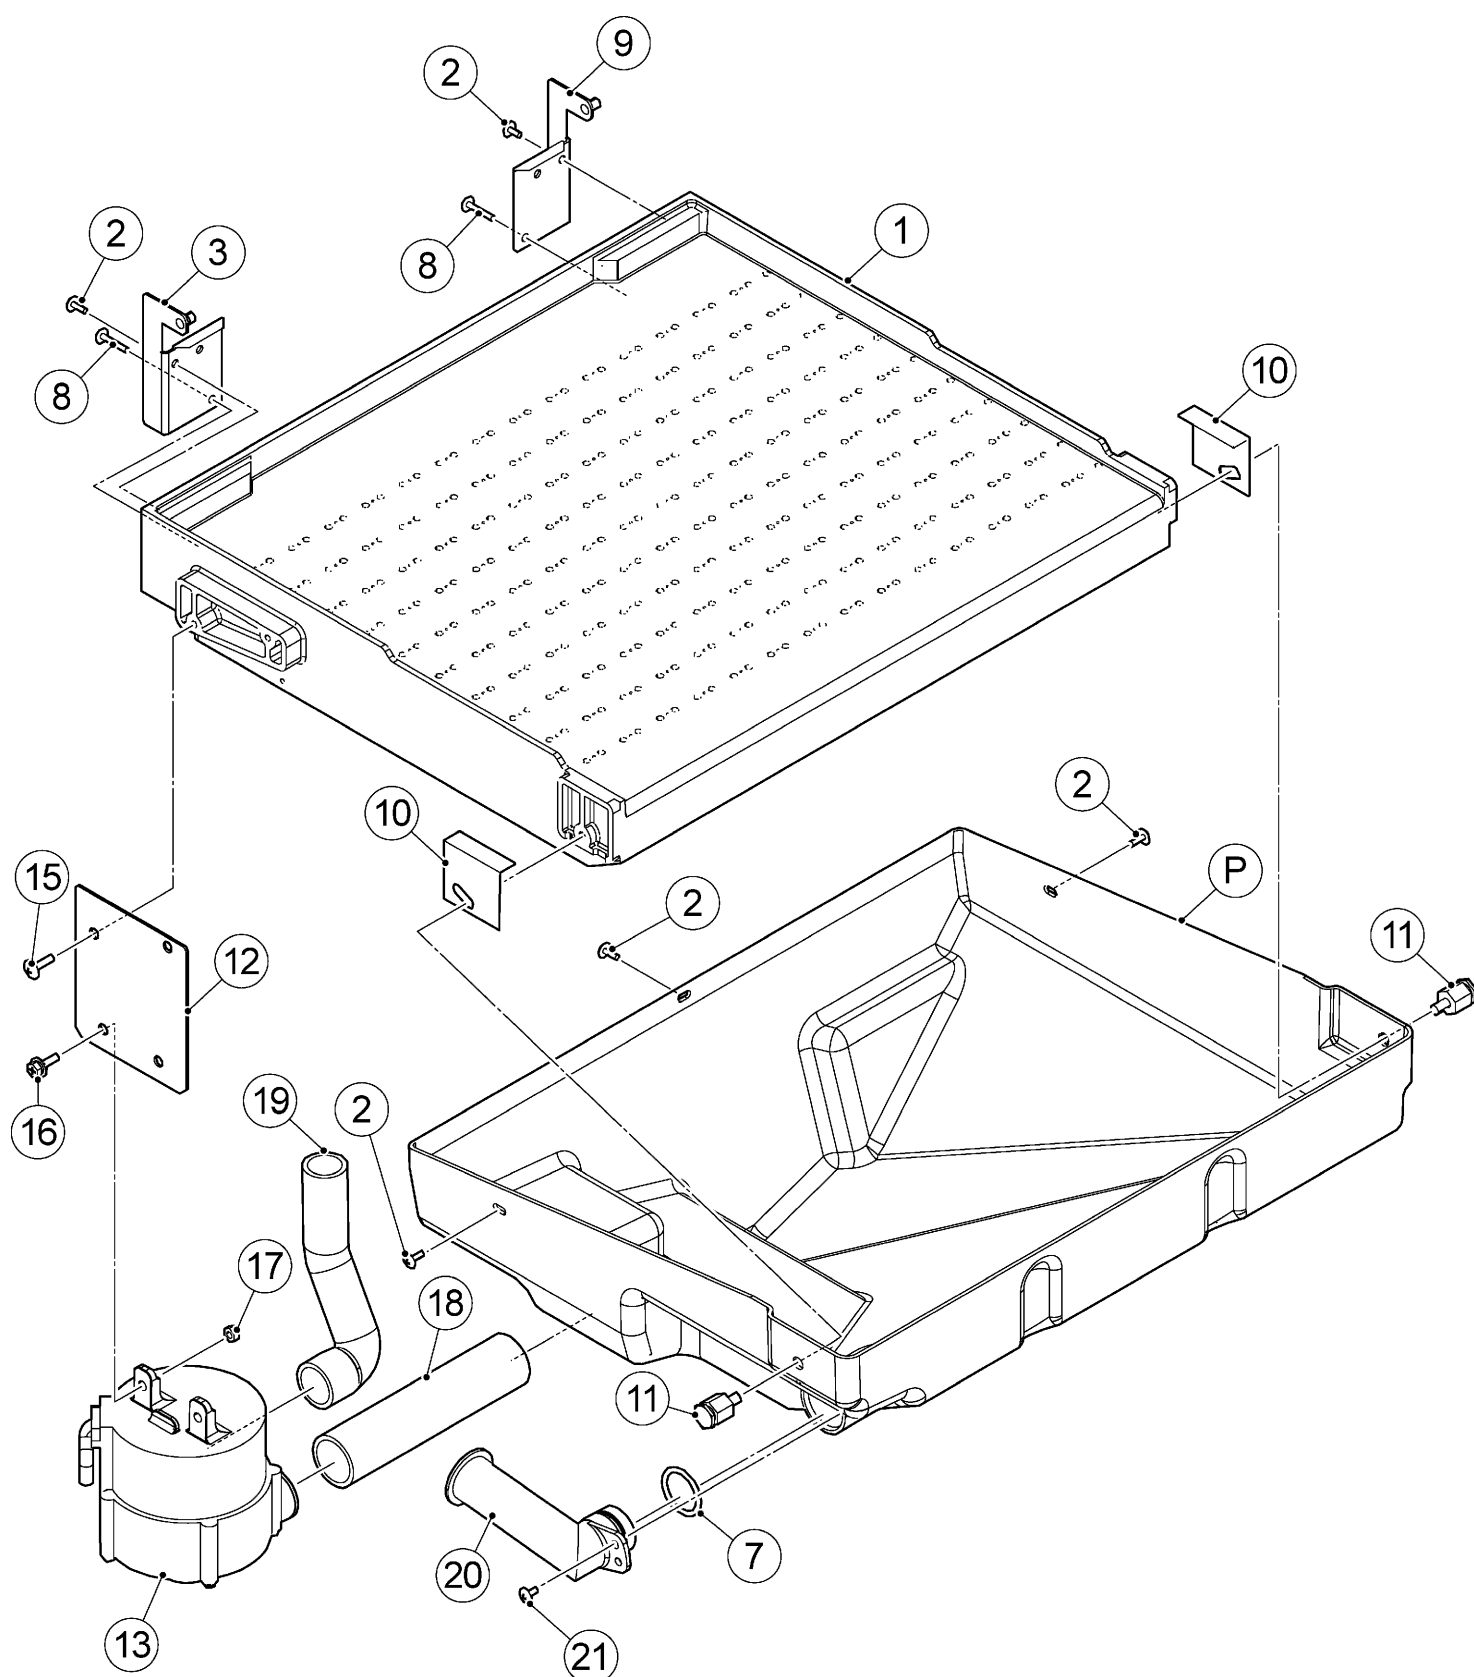

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **L. WATER PAN ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
P	WATER PAN		1H0888-02	1				
	WATER TANK(AD3)	-U,-E	2E0256A01	1				
1	WATER PLATE	28mm/23mm	208020G01	1				
		32mm	1H0351G01	1				
2	TRUSS HEAD TAPPING SCREW T2	28mm/23mm	FT20410S0	7				
3	BRACKET - WATER PAN(R)		3E0292G01	1				
4	PAN HEAD MACHINE SCREW	32mm	FSP0420S0	4				
5	NUT	32mm	FNH104S0	4				
6	PAN HEAD MACHINE SCREW	32mm	FSP0416S0	2				
7	O RING - DRAIN		4E0037R01	1				
8	TRUSS HEAD TAPPING SCREW T2	28mm/23mm	FT20420M0	2				
9	BRACKET - WATER PAN(L)		3E0293G01	1				
10	BRACKET		402957-01	2				
11	SCREW SPRING HOOK		4H2582G01	2				
12	BRACKET - PUMP		4E0241M01	1				
13	PUMP MOTOR		P00617-02	1				
14	TRUSS HEAD SCREW	32mm	FST0516S0	2				
15	TRUSS HEAD TAPPING SCREW T2	28mm/23mm	FT20516S0	2				
16	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0516S0	2				
17	NUT		FNH105S0	2				
18	SUCTION TUBING		4E0231R01	1				
19	DISCHARGE TUBING		4E0230R01	1				
20	PIPE-DRAIN		315530-01	1				
21	TRUSS HEAD SCREW	28mm/23mm	FST0408S0	1				
		32mm	FST0408S0	4				

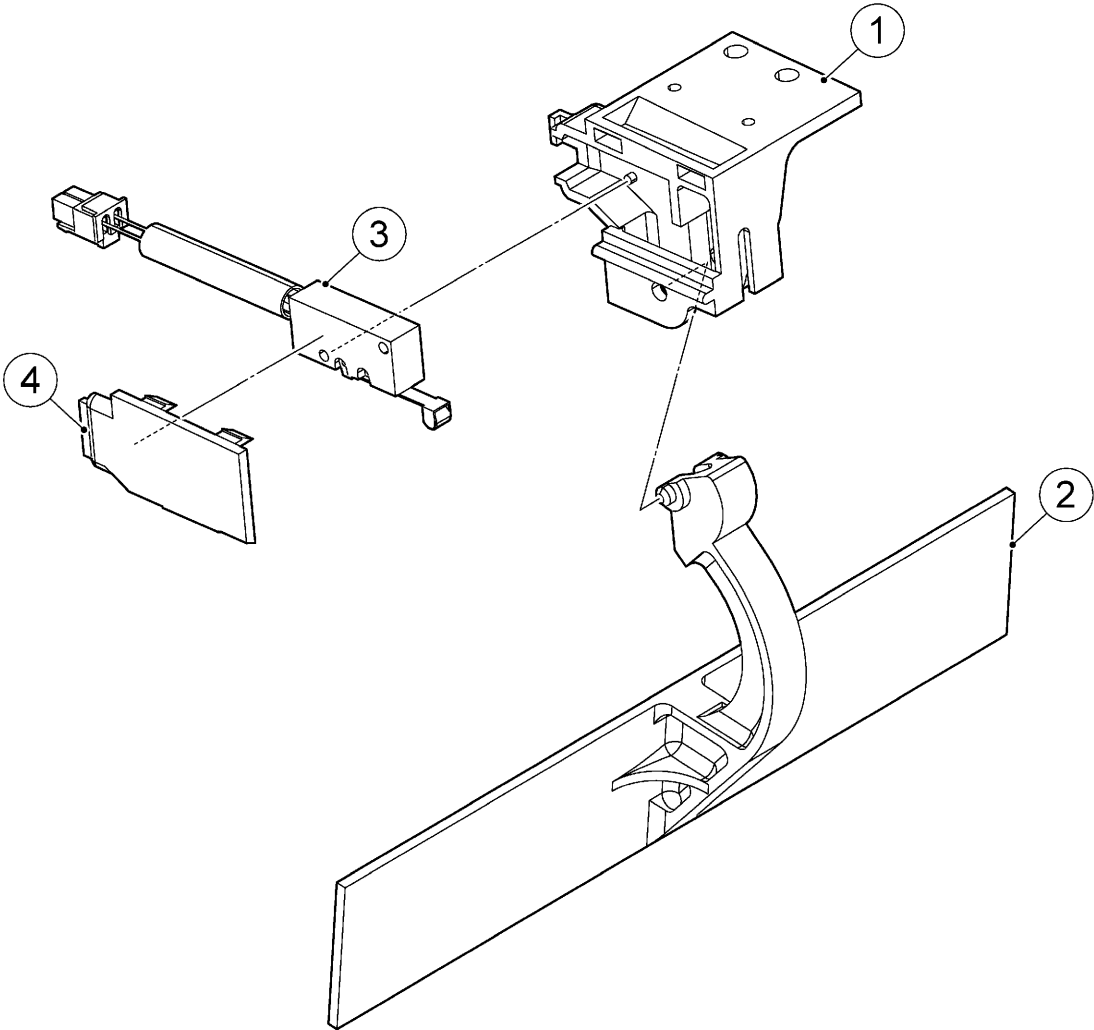

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **M. BIN SWITCH ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	SWITCH BOX		2H2043-01	1				
2	SWITCH - ACTUATOR		2H7202-01	1				
3	BS ASSY (A)		4E0250G01	1				
4	SWITCH BOX COVER		4H8785-01	1				

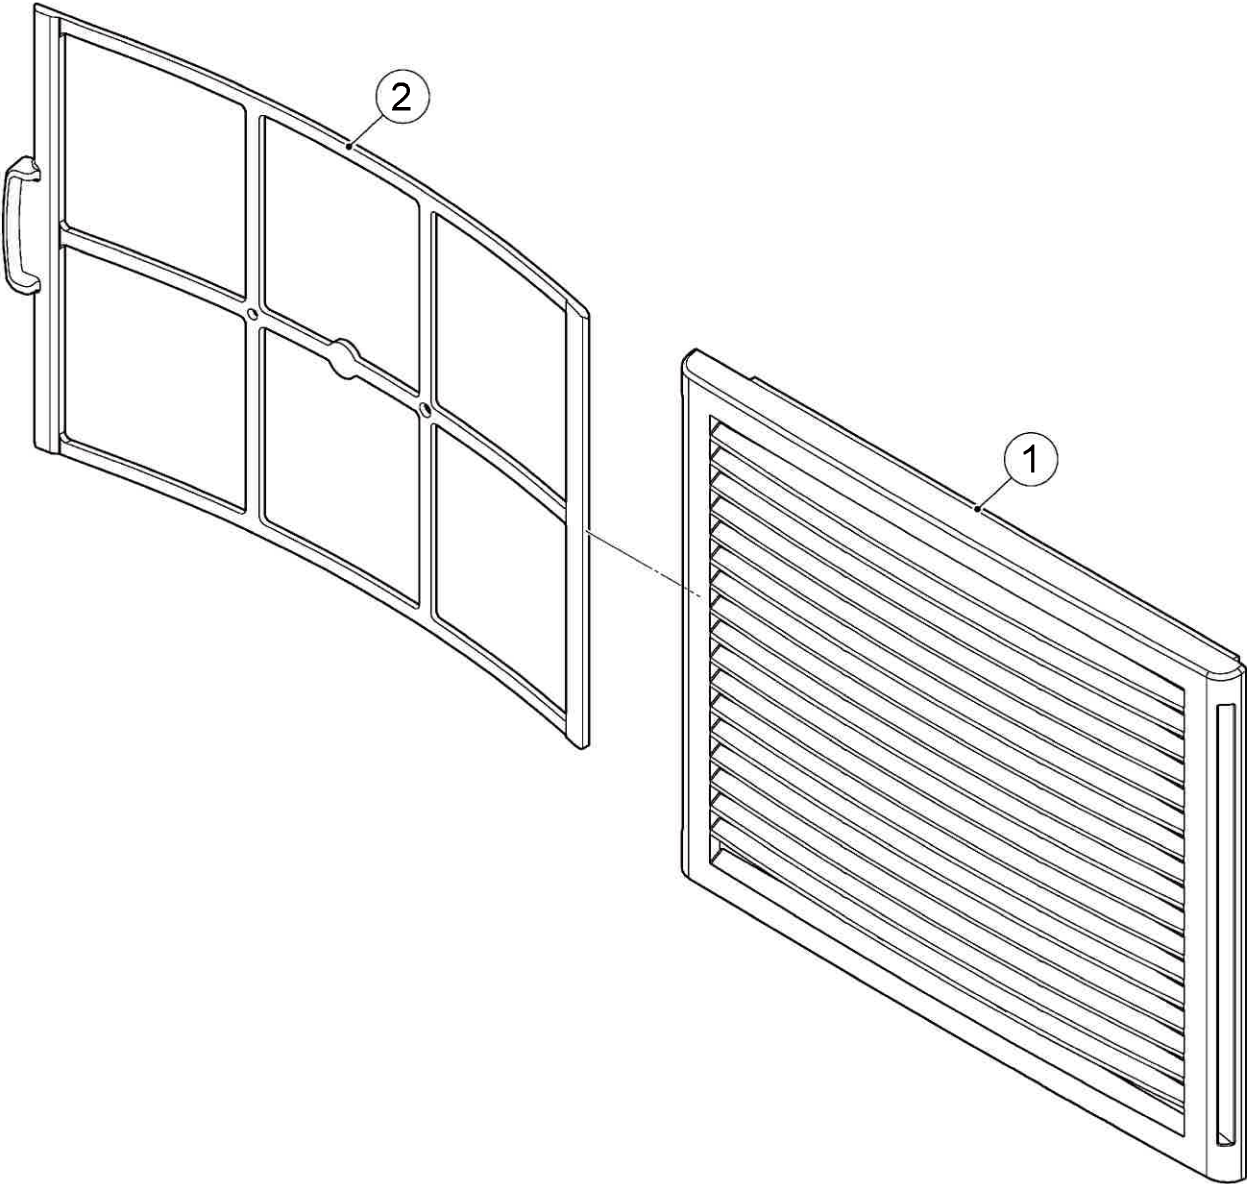

MODEL: **IM-240APE(-23,-32)**

TITLE: **N. LOUVER ASSY**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	LOUVER		121931P01	1				
2	AIR FILTER		262259G01	1				

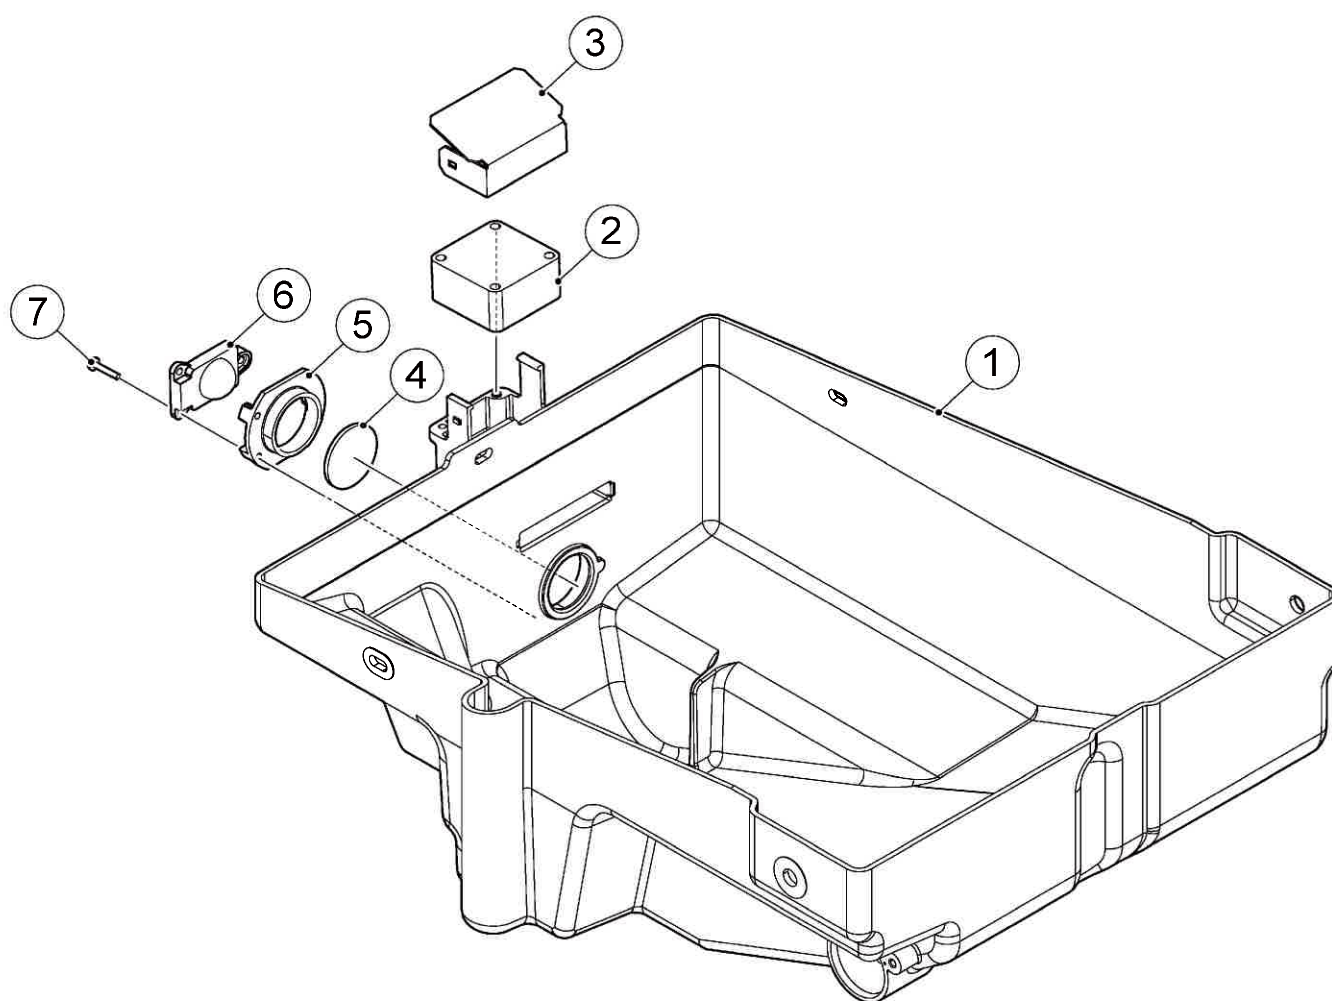

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **P. WATER PAN AD3**


INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	WATER TANK(AD2)		2E0255G01	1				
2	FAN MOTOR		P06703-01	1				
3	DUCT - GARD		4E0202M01	1				
4	WINDOW - GASKET		P06651-01	1				
5	HOLDER - LED		3E0331P01	1				
6	UVC-LED		P06697-01	1				
7	PAN HEAD MACHINE SCREW		FT50314S0	3				

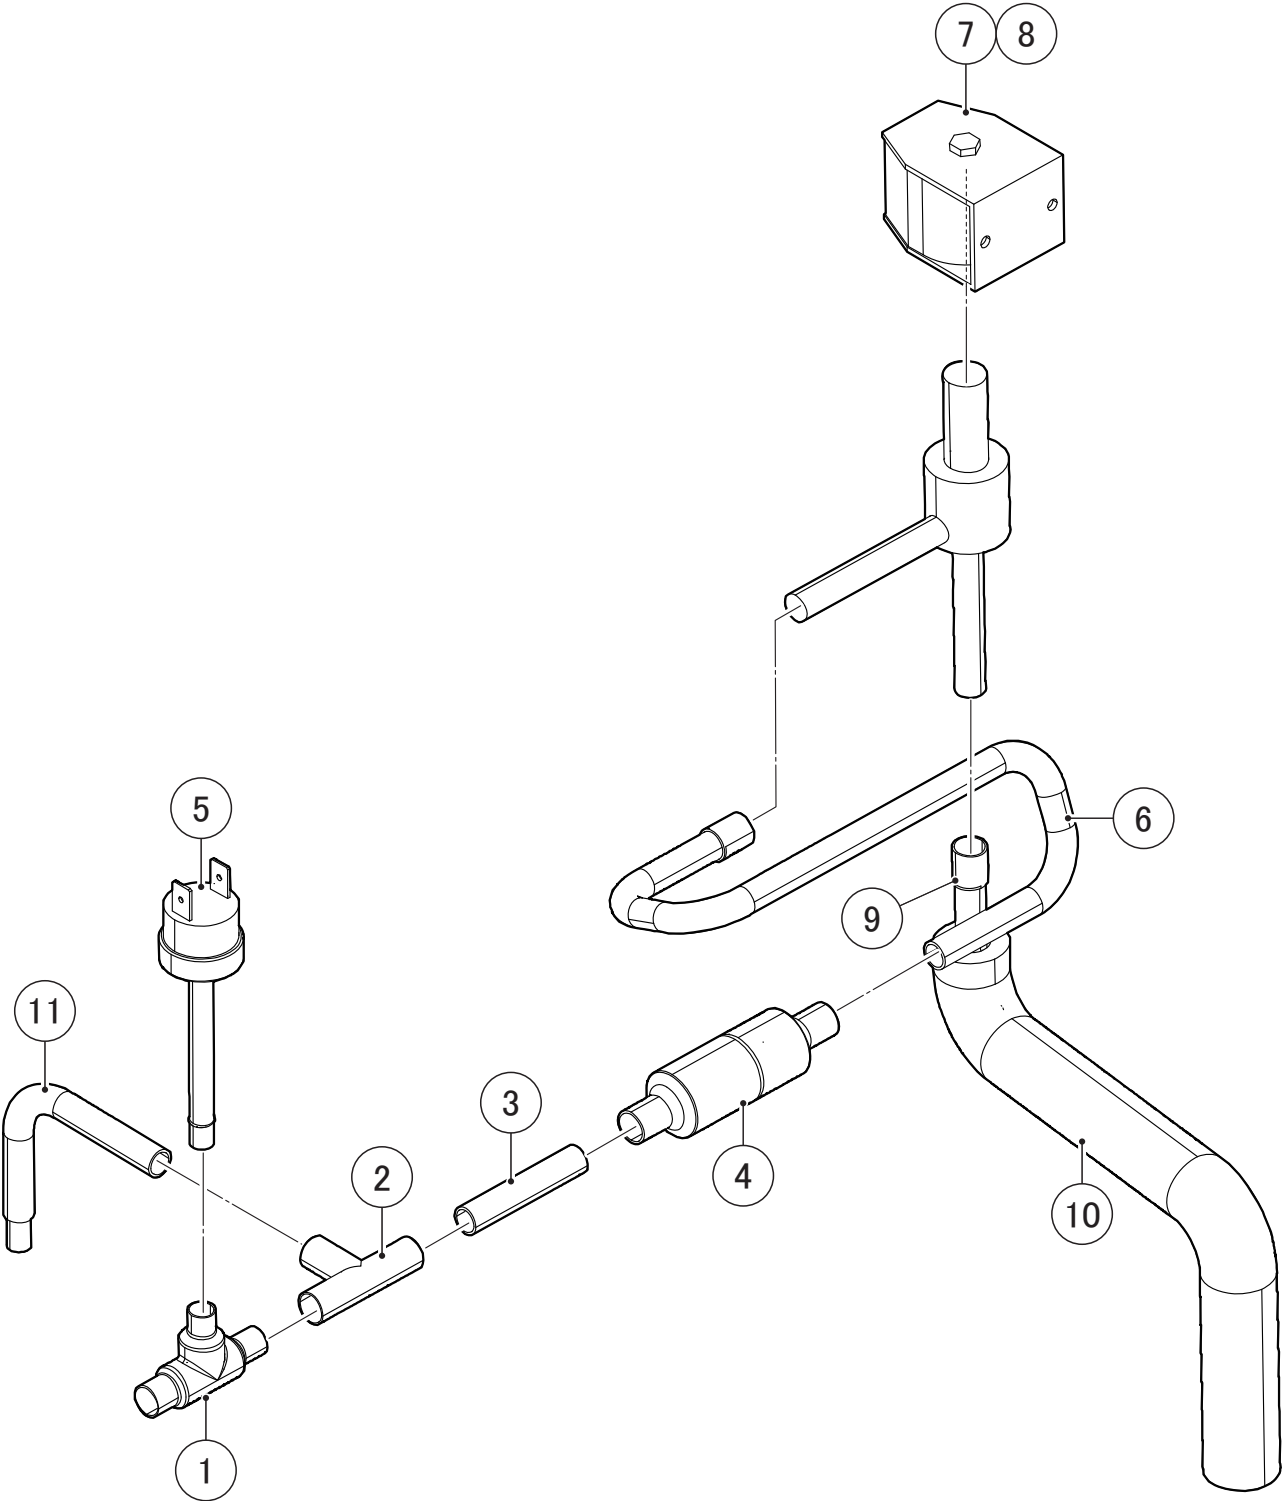

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **Q. COPPER TUBE (E) - HG**




INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	TEE		439140-02	1				
2	TEE		420041-11	1				
3	COPPER TUBE (HG)		4E0292M01	1				
4	STRAINER		P00812-01	1				
5	PRESSURE SWITCH		P06862-04	1				
6	COPPER TUBE B - HG		4E0276M01	1				
7	HOT GAS VALVE	METAL COMPONENT	P04242-0A	1				
8		ELECTRICAL COIL	4E0251G01	1				
9	COPPER TUBE D - HG		3E0428M01	1				
10	INSULATION TUBE		H71020220	1				
11	COPPER TUBE A - D		477813M01	1				

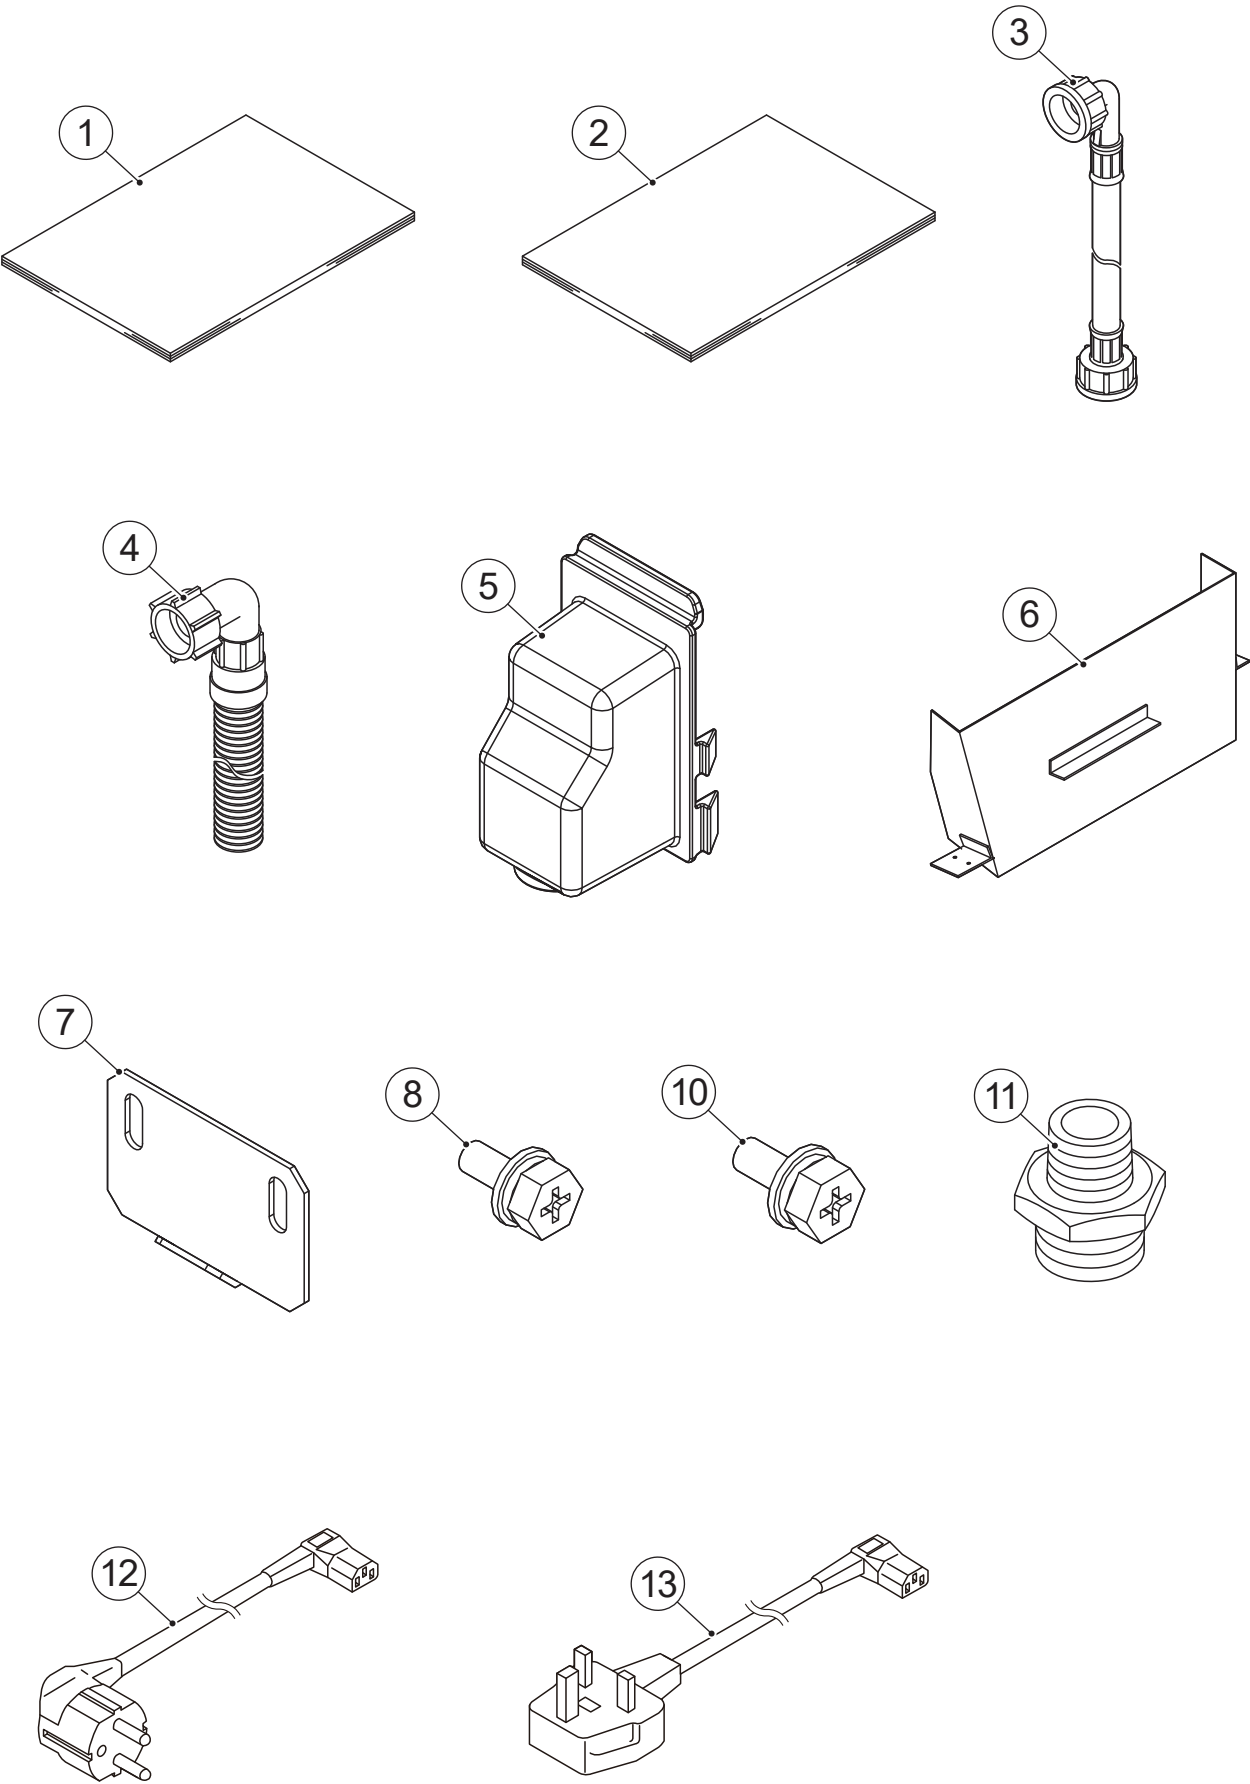

MODEL: **IM-240APE(-23,-32)**
 MODEL: **IM-240AWPE(-23)**

TITLE: R. ACCESSORIES

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	INSTRUCTION MANUAL		L1M113204	1				
2	INSTRUCTION MANUAL	Quick Start Manual	121594L01	1				
3	INLET HOSE (WRAS 1206050, VDE A-260 6R 105)	Air Cooled	P03534-01	1				
		Water Cooled		2				
4	OUTLET HOSE	Air Cooled	452365-01	1				
		Water Cooled		2				
5	COVER - CONNECTOR		2X0271P01	1				
6	ICE CHUTE		2H9759G01	1				
7	BRACE		4Y7310M01	2				
8	HEX HEAD BOLT SW		FBK0410S0	2				
10	HEX HEAD BOLT (SPRING WASHER AND FLAT WASHER)		FBK0512S0	2				
11	ADAPTOR	Water Cooled	450724-01	2				
12	POWER SUPPLY CORD	EU-PLUG(16A)	P03362-01	1				
13	POWER SUPPLY CORD	UK-PLUG(13A)	P03363-01	1				

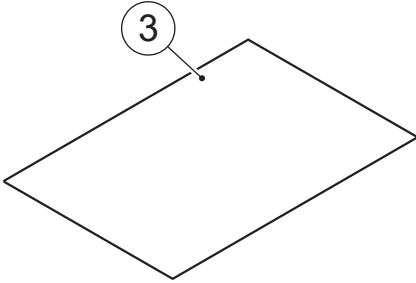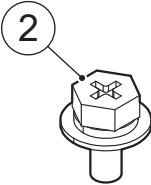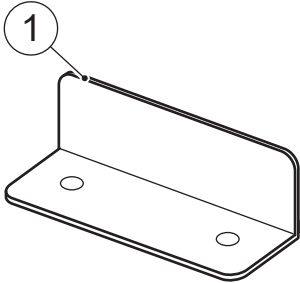

MODEL: **IM-240APE(-23,-32)**
IM-240AWPE(-23)

TITLE: **S. OPTIONAL PARTS**

INDEX NO.	DESCRIPTION	MATERIAL OR MODEL NUMBER	PART NUMBER	REQ'D NUMBER				
				P-0				
1	PLATE-ICECHUTE		4Y6284M01	1				
2	HEX HEAD BOLT SW		FBK0408S0	2				
3	INSTRUCTION SHEET		258216L01	1				